

BUSH

Instruction Manual

WGB01-S/WGB01-B



Table of content

Important safety information	3
Instruction for use.....	4
Check the packing contents	4
Where to put your BUSH Portable Bluetooth Speaker	4
Setting up	4
Your Bush Portable Bluetooth Speaker	5
Using Bluetooth Speaker	6
Technical Specification	6
Troubleshooting	7
Product Guarantee	8



Important safety information

Your Bush Portable Bluetooth Speaker should be treated with care. The information below has been provided in the interest of safety and will help you to enjoy this product and the benefits it brings for many years .

- Keep the product and all its parts out of reach of children .
- This product is not intended for use by persons (including children) with reduced physical ,sensory or mental capabilities ,or lack of experience and knowledge ,unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety .
- Keep it dry ,avoid exposure to precipitation ,humidity and liquids which could all affect the product circuitry.
- DO NOT leave it in high temperatures as electronic devices and plastic parts may rap in heat .
- DO NOT leave it in low temperatures as moisture can form inside the product ,which may damage the circuit board .
- DO NOT block or cover slots ,holes or opening on the product by placing on soft furnishings such as carpets ,rugs ,or beds as these are provided or functionality and /or ventilation to ensure safe operation of the products.
- DO NOT store in dusty or dirty areas .
- DO NOT use harsh or abrasive cleaning agents or solvents
- DO NOT dismantle your speaker
- DO NOT paint your Speaker

Instruction for use

Check the package contents

The package contain

- 1 x Bush Portable Bluetooth Speaker
- 1 x Micro USB charging cable
- 1 x Instruction Manual

Where to put your portable Bluetooth Speaker

It is important that you consider carefully in advance where your portable Bluetooth speaker suited and make sure that it is :

On a flat and stable surface. Never place your Bluetooth speaker on antique or polished surfaces.

At least 1 metres away from other electronic appliance to avoid interference.

Away from bright sunshine or heat sources, such as a radiator.

Not in a humid or very damp place such a bathroom.

Setting up

1. Insert the small end of included USB charging cable into Micro USB Charging port on the side of your speaker as below image shown(image 3) :
2. Plug other end of the included USB charging cable into a spare USB socket on computer or other power source as below shown.
3. leave the speaker to charge until the the charging light until the charging light on the side of the speaker goes out .
4. When the charging light has gone out ,the speaker is full charged and ready for use .

Note: If the volume is very high the speakers battery will rundown faster .

Using your Bluetooth speaker

Switch ON /OFF

Slide the ON/OFF to ON position at bottom of units , the blue light will be power on .

Slide the ON/OFF to OFF position at bottom of units , the blue light will go out .

 
Adjust the Volume

Press and hold +/- button to adjust the volume .

Skip the Music


Press +/- button to skip Next /previous.

Your Bush Portable Bluetooth Speaker

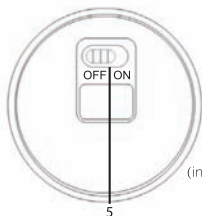


(image 1)

 Underside Review

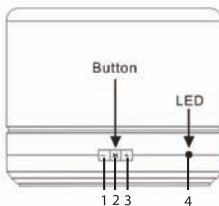

(image 2)

 Front Review

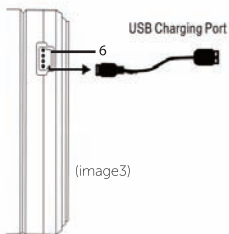

(image3)



(image 4)



1. Volume down /previous (-) button
2. Play/ Pause Button
3. Volume up /Next (+) button
4. STATUS /LED indicator

5. Switch ON/OFF
6. Micro charging Port

USING Portable Bluetooth Speaker

1. Turn your speaker on by sliding the ON/OFF switch to the on Position .Your speaker will "Beep" to show it has been Switch on .
2. The speaker will go into pair mode ,and Bluetooth light will flash .
3. You can pair the device you want to connect to the speaker .Open the bluetooth function on the device to connect .
4. Select "WGB01" from the list of available devices .
Note :If a password is required enter 0000
5. The speaker will "Beep" when the device has been successfully paired and is ready to use .
6. You can Press Play /pause button to play or pause your music .
7. When you have finished using the speaker ,slide ON/OFF switch to the OFF position and the blue light will go out .
Note :We recommend a minimum distance of 40 to 90 cm from your speaker when listening to it .

TECHNICAL SPECIFICATION

Amplifier Power :2Watt

Bluetooth Version :V2.1

Operating range : 10m in Open air

Music play back time :2 hours

Built in 3.7V rechargeable battery

Micro USB Charging port

TROUBLESHOOTING

Observation	Potential cause / solution
No sound	Is the volume on the smart phone set at minimum? Check the volume buttons on side of the speaker !
Speaker will not pair with device	Ensure the device supports bluetooth function ,if the device is unable to connect after five minutes switch the speaker off and remove the link from the devices bluetooth list .Switch the speaker back on and follow the instruction in the "Connecting using bluetooth " section of these instructions .
Unstable bluetooth connection	Move closer to the speaker or turn the speaker in a different direction .

RECYCLING ELECTRICAL PRODUCTS



You should now recycle your waste electrical goods and in doing so help the environment.

This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

Visit www.recycle-more.co.uk, click on "bank locator" and enter your postcode to find your nearest recycling site.

Guarantee

BUSH

PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd.
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW