



Instruction Manual

Bush Abbey DAB+ Clock Radio
Model No.DS-962



Need technical support? Call our experts on 0345 604 0105
or go online at www.argos-support.co.uk

You'll soon be enjoying your new DAB+ CLOCK RADIO

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We are here to help you get the most from DAB+ Clock Radio. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 604 0105**.

Contents

1 Safety information

Important Safeguards 5

2 Getting to know your clock radio

Clock radio 8

3 Using your clock radio

Power Source 10

General operation 10

System settings 10

How to store a preset 11

How to recall a preset 12

DAB+ Operation 12

FM Operation 13

4 Other information

Specification 15

5 Product support


Help and assistance 17

Disposal 18

Declaration of Conformance 18

Bush Guarantee 19

Safety information **1**

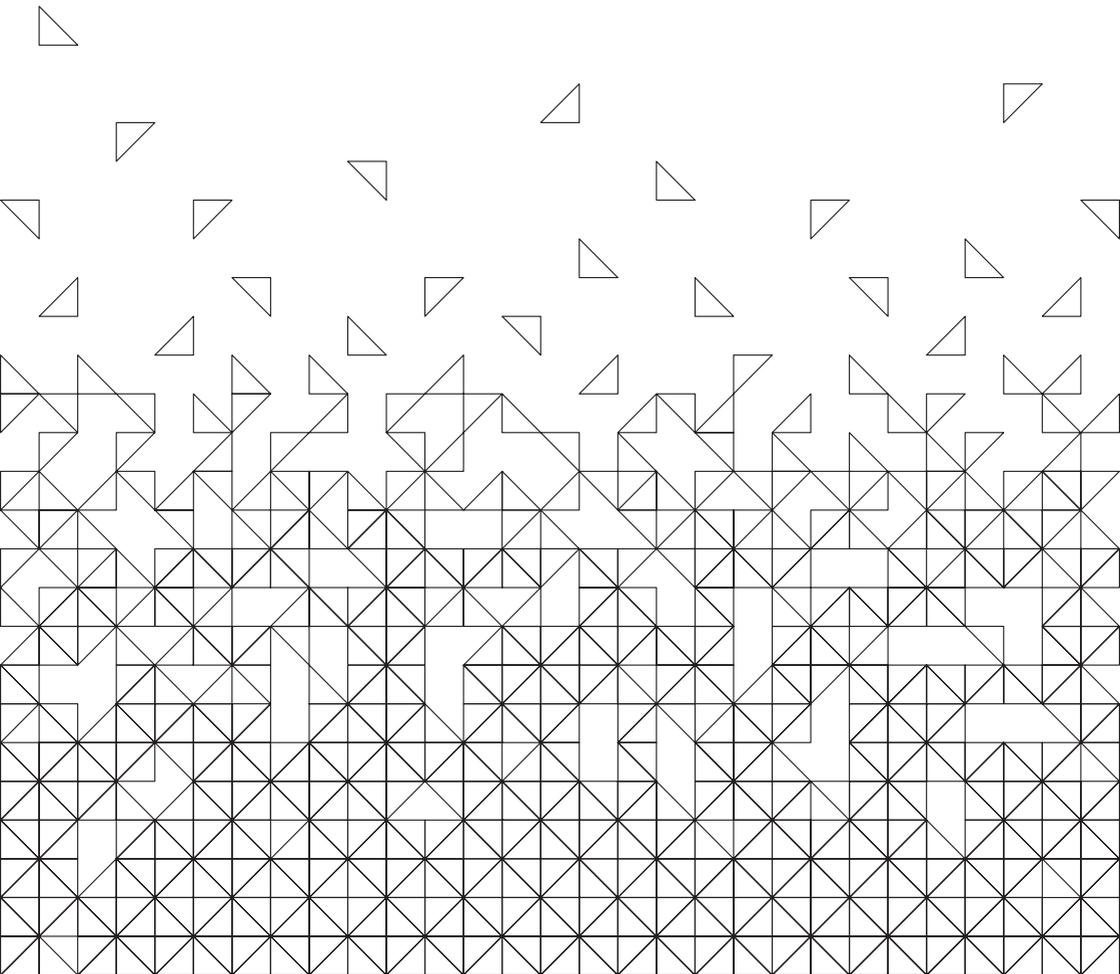

Safety information

Important - Please read these instructions fully before use




- * This appliance is intended for domestic household use only and should not be used for any other purpose or in any other application, such as for non-domestic use or in a commercial environment.
- * Ventilation
- * Allow at least a 10cm gap all around the product.
- * The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- * No naked flame sources, such as lighted candles, should be placed on the apparatus.
- * Attention should be drawn to the environmental aspects of battery disposal.
- * This apparatus is not suitable for use in a tropical climate.
- * The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- * Never let anyone push objects into holes and ventilations slots.
- * Do not attempt to repair this product yourself; always get a qualified service agent carry out adjustments or repairs.
- * The marking plate is located at the bottom of the apparatus.
- * To prevent possible hearing damage, do not listen at high volume levels for long periods.



Getting to know your DAB+ Clock Radio

2

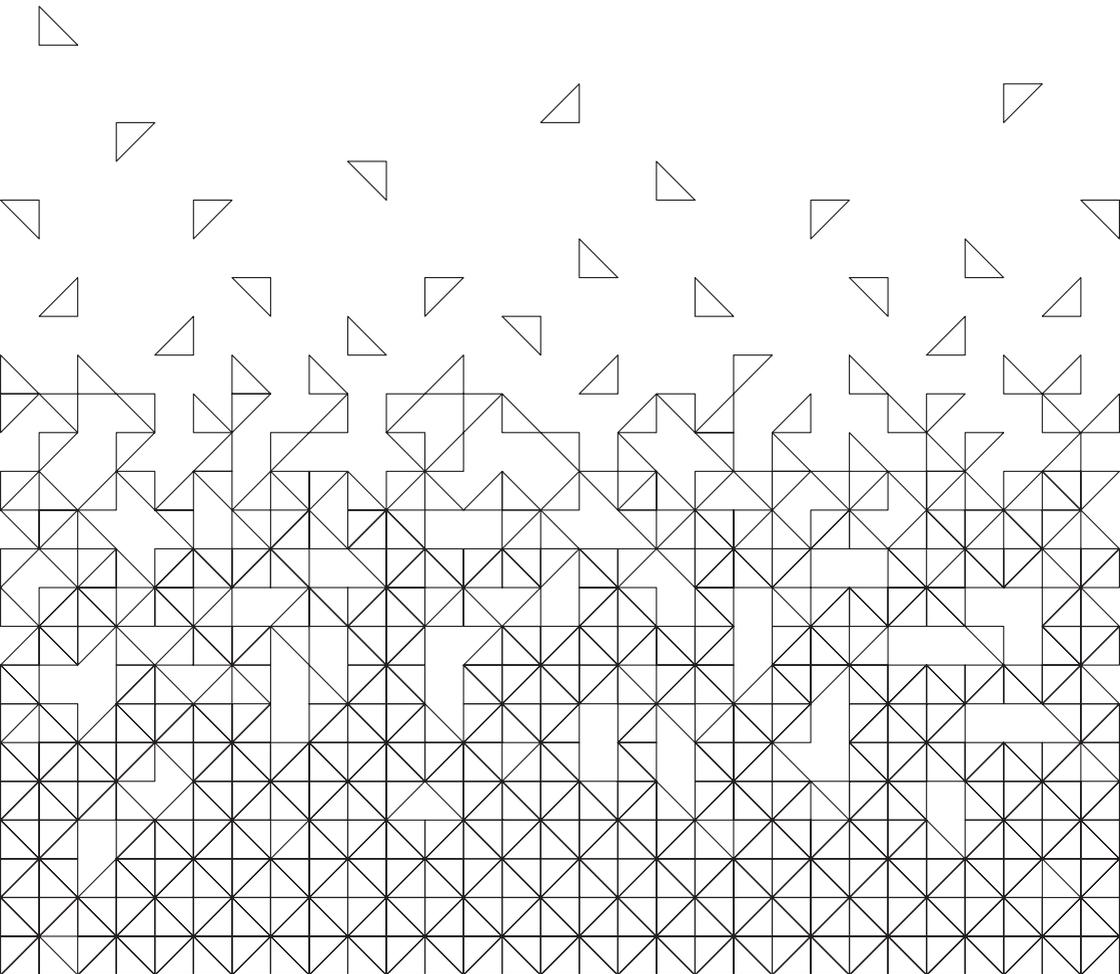

Getting to know your DAB+ Clock Radio

You'll be up and running in no time


Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation. If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it, please do so according to local regulations.

The following items are included:

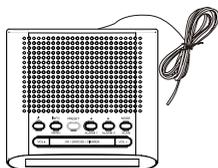

Main Unit



UK Mains AC/DC adaptor




Instruction Manual

Getting to know your DAB+ CLOCK RADIO

You'll be up and running in no time

CLOCK RADIO

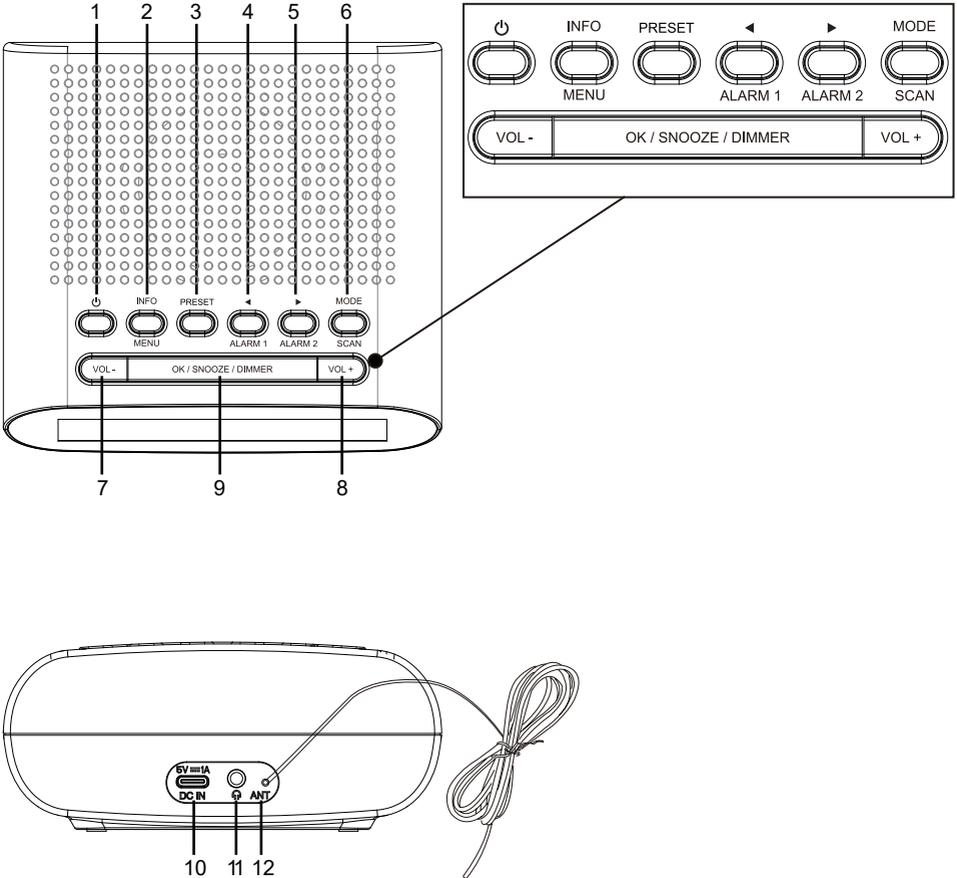


1. POWER
2. INFO/MENU
3. PRESET
4. PREV / ALARM 1
5. NEXT / ALARM 2
6. MODE / SCAN

7. VOL -
8. VOL +
9. OK / SNOOZE / DIMMER
10. DC IN PORT (USB C)
11. HEADPHONE JACK
12. WIRE ANTENNA

Need technical support? Call our experts on 0345 604 0105
or go online at www.argos-support.co.uk

Using your DAB+ Clock Radio

3

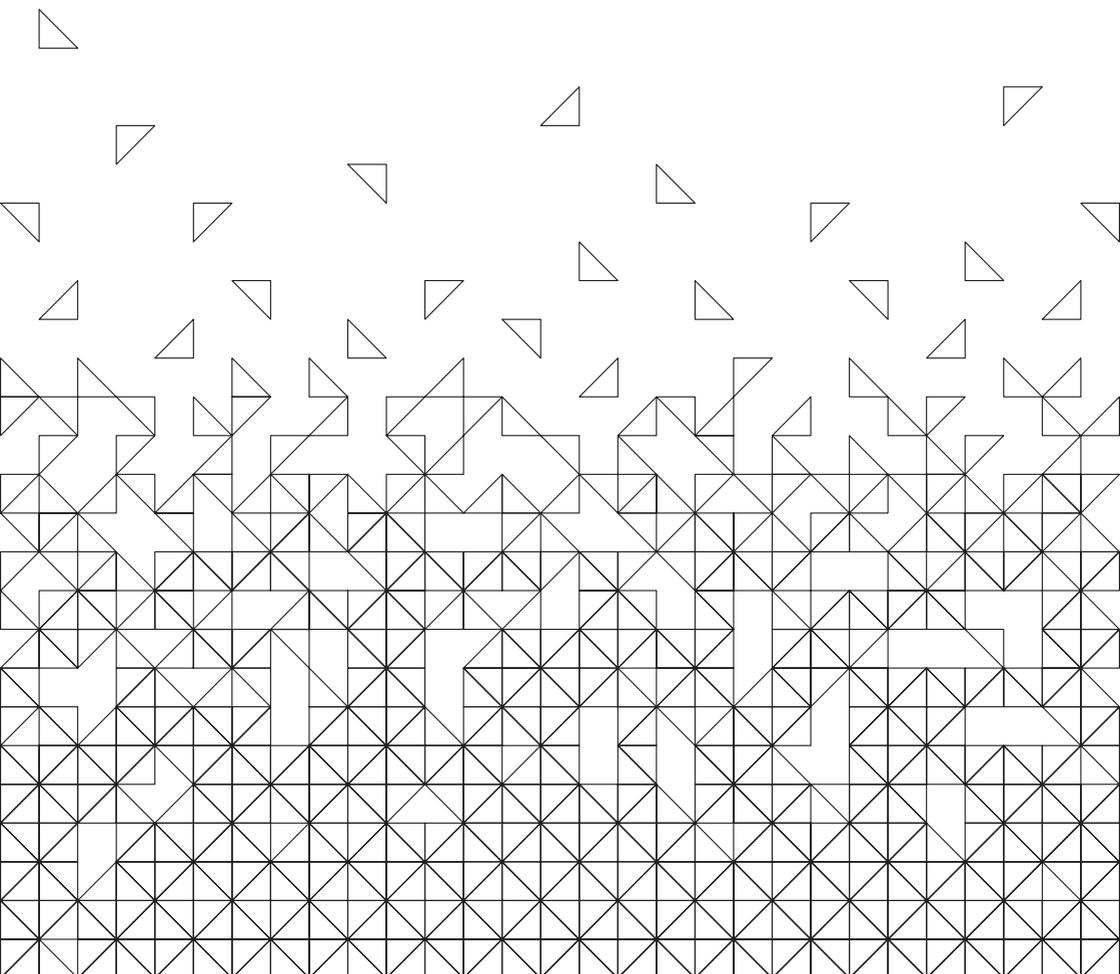

Using your DAB + CLOCK RADIO

Let's get started

Power source

Unwind the main adaptor cable to its full length. Connect the end of the cable to the DC IN Socket at the rear of the unit and then connect to the mains adapter to the mains socket.

General operation

Unwind the wire antenna to its full length.

Press  to turn the radio on and the display will show "WELCOME".

When DAB mode is activated for the first time, a scan will automatically commence and will play the first station once finished.

Adjust the wire antenna to try to get good signal if need.

- Press  to switch the unit to ON mode.
- Press  to switch the unit back to STANDBY mode.
- Please turn the unit off completely to save energy when not in use.

Selecting modes

Press MODE/ SCAN button to switch between Digital Radio & FM modes.

Adjusting the Volume

Press VOL+ or VOL - to increase/decrease the volume.

System settings

Press and hold INFO/ MENU to access the menu and then press OK/SNOOZE/DIMMER to select System.

Time Setup

1) Set Time

Press ◀ or ▶ to select hour/min/date/month/year, then press OK/SNOOZE/DIMMER to confirm and saved.

2) Set Date Format

Press ◀ or ▶ to select 'DD-MM-YYYY' or 'MM-DD-YYYY', then press OK/SNOOZE/DIMMER to confirm.

3) Update

Press ◀ or ▶ to select 'ANY' or 'DAB' or 'FM', or 'NO UPDATE', then press OK/SNOOZE/DIMMER to confirm.

Please note the time is displayed in 24hr format only. It is not possible to change to 12hr am/pm format.

Sleep:

The device features a sleep timer function, which switches the radio off after a certain time if no actions have been performed up until then.

1. Press ◀ or ▶ to select either OFF-05-15-30-45-60-90-120 minutes.
2. Press OK/SNOOZE/DIMMER to confirm your selection.

Need technical support? Call our experts on 0345 604 0105

Using your DAB + CLOCK RADIO

Let's get started

Alarm 1 or Alarm 2 setting

Note: Check that the radio has the correct time and date before you set an alarm.

1. Press ◀ or ▶ to select ALARM 1 or ALARM 2 and press OK/SNOOZE/DIMMER into Alarm setting. (Or press and hold ◀/ALARM 1 or ▶/ALARM 2 into Alarm setting at Standby mode.)
2. Press ◀ or ▶ to select OFF or ON, and press OK/SNOOZE/DIMMER to confirm.
3. Source: press ◀ or ▶ to select Beep / DAB /FM and press OK/SNOOZE/DIMMER to confirm. When selecting Digital Radio or FM, the radio will play the station that was last listened to as the alarm.
4. Frequency: Press ◀ or ▶ to select Daily, Once, Weekends or Weekdays, press OK/SNOOZE/DIMMER to confirm.
5. Wake Up time : press ◀ or ▶ to select hour/min and press OK/SNOOZE/DIMMER to confirm.
6. Volume: 1- 15, Press ◀ or ▶ to select and press OK/SNOOZE/DIMMER to confirm and saved.

Note: Once the alarm sounds, press OK/SNOOZE/DIMMER to delay the alarm for another 5 mins. The radio will go to Standby mode.

To cancel a sounding alarm, or an alarm in snooze, press ⏻.

Backlight:

On level, press ◀ or ▶ to select from "High", "Medium", or "Low" and press OK/SNOOZE/DIMMER to confirm.

Dimmer level, press ◀ or ▶ to select from "High", "Medium", or "Low" and press OK/SNOOZE/DIMMER to confirm.

Factory Reset:

Press ◀ or ▶ select "Y or N" and press OK/SNOOZE/DIMMER to confirm.

How to store a preset station

Up to 20 DAB+ and 20 FM preset stations can be stored.

To store a station that you are currently playing: press and hold PRESET, press ◀ or ▶ to select the number (1-20) you want to store the station as. Then press OK/SNOOZE/DIMMER, the display will then show 'Saved'.

Using your DAB + CLOCK RADIO

Let's get started

How to recall a preset radio station

Press PRESET, and press ◀ or ▶ to scroll through your preset stations. Press "OK/SNOOZE/DIMMER" button to confirm.

DAB OPERATION

Press MODE/SCAN to switch to DAB mode.

The DAB mode will automatically be selected and the first time the radio is connected to the supply the radio will perform a quick scan. The display will show a slide bar that indicates the progress of the scan, the name of the last station found and the total number of stations found so far.

When the scan is finished the radio will play the first found station. If the radio does not find any stations, "SCAN" displayed. Press OK/SNOOZE/DIMMER to scan again. Or press and hold MODE/SCAN to scan.

To listen to all stations that have been stored use ◀ or ▶ to scroll through them.

Press OK/SNOOZE/DIMMER when on the required station.

The radio will display station information when you press the 'INFO / MENU' button. Press multiple times to view all information available.

When you turn on the radio again after it switching off, it will automatically tune to the same station (DAB or FM) that was last selected.

Remarks : In DAB mode, the radio will synchronize with the time and date of the station.

Station information for DAB Radio

Signal Strength : Displays a signal bar with the strength of the current station.

PTY (Programme Type) : shows the type and description of the program provided by the DAB station.

Station name : Shows station name

Channel and Frequency : Displays the station's transmission channel number and frequency.

Signal Error : Provides details of the signal error rate.

Bit Rate : The data rate which the signal is being transmitted.

Time : Shows the hour/min/sec

Date: shows DD/MM/YEAR

SCAN

Press and hold INFO / MENU to step into setting surface.

Select 'SCAN' by pressing OK/SNOOZE/DIMMER to start scanning.

DRC

Select 'DRC' by press ◀ or ▶, then press OK/SNOOZE/DIMMER to step into, DRC High /DRC Low /DRC Off can be optional, then press OK/SNOOZE/DIMMER to confirm.

Prune

If want to delete such stations without signal in the station list, press OK/SNOOZE/DIMMER button, select 'Y' or 'N' by press ◀ or ▶ button, then press OK/SNOOZE/DIMMER to confirm.

Need technical support? Call our experts on 0345 604 0105

Using your DAB + CLOCK RADIO

Let's get started

FM Operation

Press MODE/SCAN to switch to 'FM' mode. The first time you do this, FM frequency '87.5 MHz' will be displayed on the screen.

Press and hold MODE /SCAN to start full scan, then the stations will be stored at Preset, and play the last station.

Press ◀ or ▶ button can scan back or forward by each 0.5mhz.

The radio will display station information when you press INFO/MENU, press multiple times to view all information.

Scan Setting

Press and hold INFO/MENU to step into, then press ◀ or ▶ to select 'Scan setting', press OK/SNOOZE/DIMMER to confirm.

Press ◀ or ▶ to select "DISTANT" or "LOCAL", then press OK/SNOOZE/DIMMER to confirm.

Audio setting

Press ◀ or ▶ to select 'Stereo' or 'Mono', then press OK/SNOOZE/DIMMER to confirm.

Station information for FM Radio

Signal Strength : Displays a signal bar with the strength of the current station.

PTY (Programme Type) : shows the type and description of the program provided by the FM station.


Station name : Shows station name

Audio Type : Displays the audio type of the station you are listening to. It will either be stereo or mono.

Time : Shows the hour/min/sec

Date : Shows the date/month/year

Other information 4

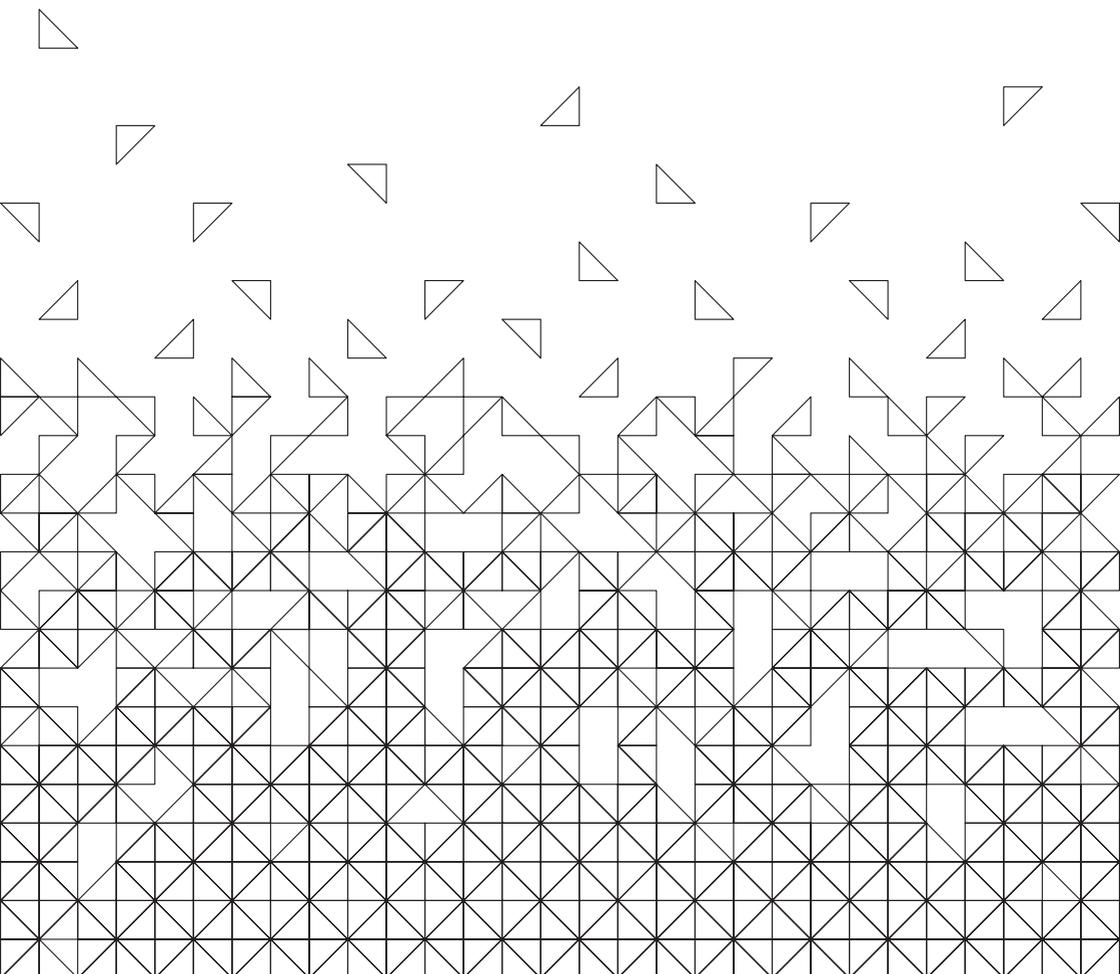

Other information


Specifications

Model No.	DS-962
Power Supply	DC 5V $\overline{\text{---}}$ 1A (5W)
Power Consumption	5W
Speaker Output Power	1.5 W RMS
Working Environment -Temperature	0 ~ 40°C
Net Weight (Approx)	290g
Unit Dimension (Approx)	H5.3, W12.5, D11.7cm.
Radio Frequency	FM 87.50 – 108.00 MHz DAB+ 174 - 240 MHz
Adaptor Model No.	AD060A050100UK-Type-C
Input	100-240V ~50/60Hz 0.2A Max
Output	5V 1A (5W)

SYSTEM Version:

At working mode, press and hold INFO/ MENU to access the menu and then press OK/SNOOZE/DIMMER to select System, and then press ◀ or ▶ to select System version and press OK/SNOOZE/DIMMER to check the SW version of unit.

Product support 5

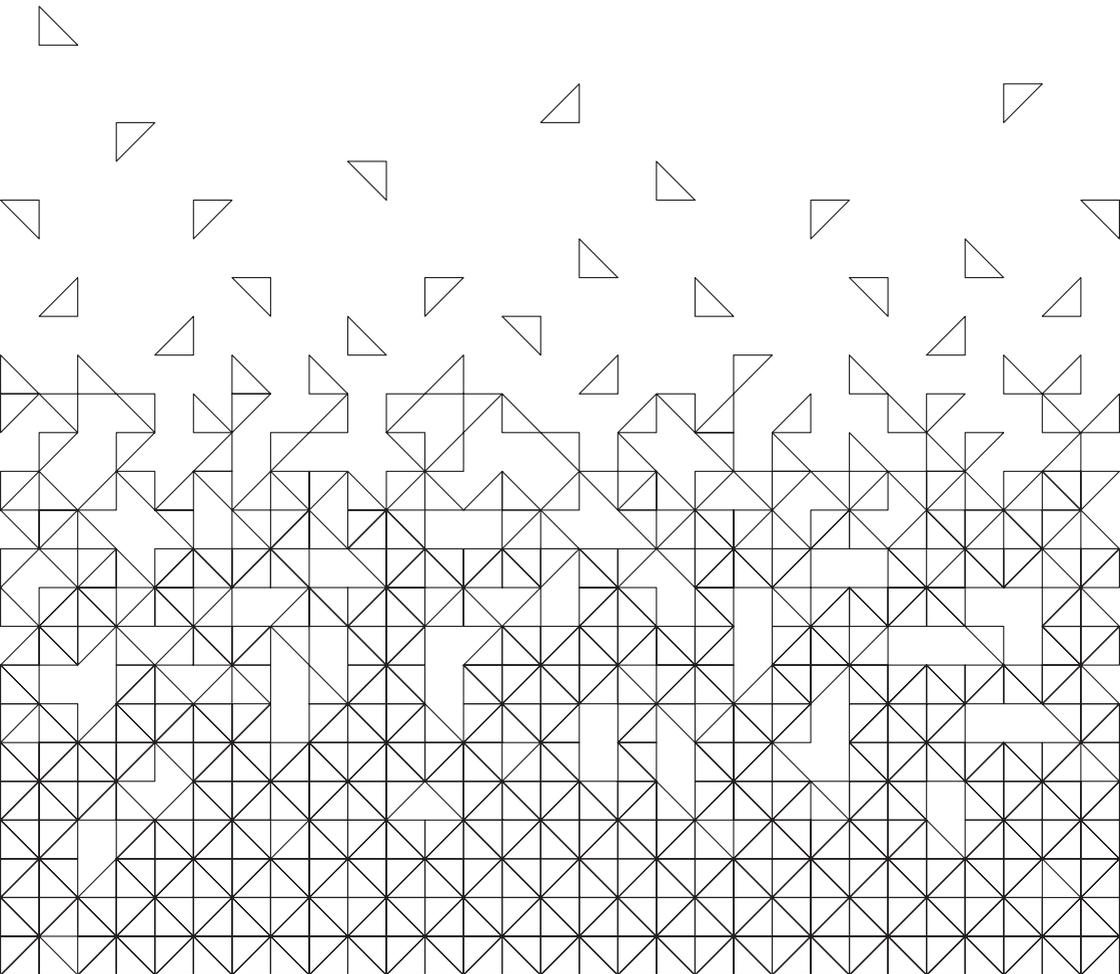

Product support

Help and assistance

If you require any technical guidance or find that your DAB+ Clock Radio operating as intended, a simple solution can often be found online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 604 0105***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.	<input type="text" value="DS-962"/>	You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.
Serial number	<input type="text"/>	
Date of purchase	<input type="text"/>	This will be shown on your receipt

Local call rates applies*

Line open 8am-7pm Monday to Saturday and 10am-4pm Sunday

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored.

Disposal



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

This product is intended for use within the UK and Northern Ireland. This equipment complies with the essential requirements for the Radio Equipment Directive 2014/53/EU and the Radio Equipment Regulations 2017.

Declaration of Conformance

Hereby, Argos Ltd, declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting www.argos-support.co.uk



Produced in China for
Argos Limited, London, EC1N 2HT, UK.
Argos(N.I.)Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK



Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*
0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is
- re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistrations.co.uk.

Guarantor: Argos Limited, London ,EC1N 2HT, UK.
Argos(N.I.)Ltd, Forestside Shopping Centre,Upper Galwally,Belfast,BT8 6FX,UK

BUSH

Contact:

www.argos-support.co.uk

Helpline: 0345 604 0105

digitalradio

Need technical support? Call our experts on 0345 604 0105
or go online at www.argos-support.co.uk