

BUSH

Instruction manual

SB03 Soundbar



You'll soon be enjoying your new Soundbar.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your Soundbar. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on 0345 600 3021.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Contents

1 Safety information

Safety information	6
--------------------	---

2 Getting to know your Soundbar

Accessories	10
Remote control (before use)	12
Changing the remote battery	12
Making the connections	13

3 Using your Soundbar

Power on	16
Standby mode	16
Change the mode	16
Adjusting the volume	16
Bass or Treble enhancement	16
Equaliser (EQ)	16
Pairing with a Bluetooth device	17
Controlling a paired device	17
Aux in mode	17
TV mode	18

4 Other information

Technical specification	22
-------------------------	----

 
5 Product support

Troubleshooting	26
Help and assistance	27
Your Bush Guarantee	29

This page is left intentionally blank

Safety information

1

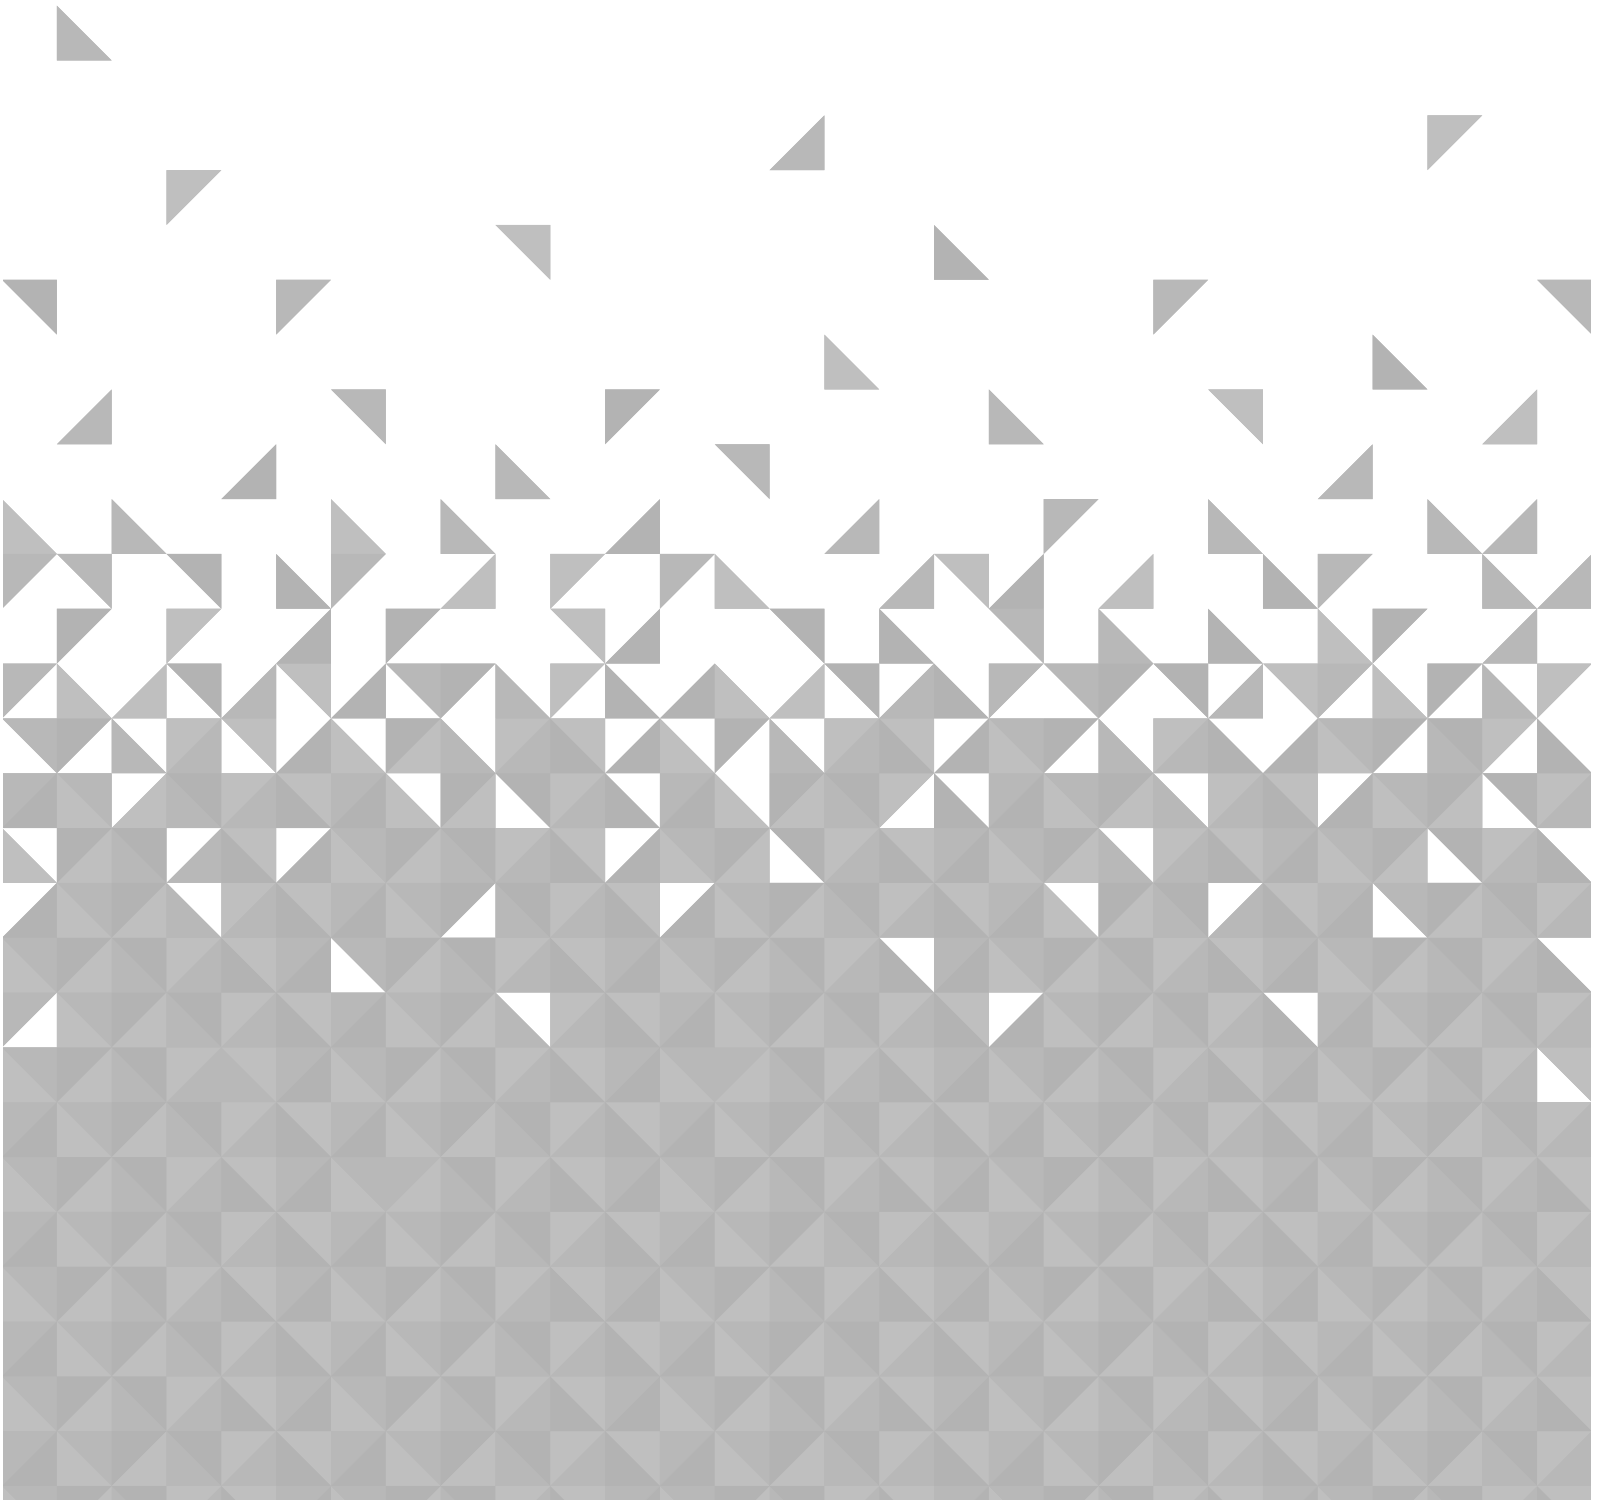



Safety information

Important - Please read these instructions fully before installing or operating

Power source

- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.
- Disconnect your soundbar from the mains power supply during thunderstorms.
- Always check that you have completely switched off your soundbar, before you change or disconnect the power supply.
- When installed, the power socket must be within easy reach.
- Do not bend, stretch or pull the supply cable in order to avoid electric shock.
- Do not attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the product may damage it and will void your warranty.
- Switch the soundbar off at the mains power socket and unplug it if you are leaving it unattended for a long period of time (holidays etc).
- Remove the battery from the remote control if it will not be used for an extended period of time.
- Only use recommended batteries or those of the same or equivalent type in the remote control.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Never throw batteries in a fire or attempt to open the outer casing.
- Batteries are harmful if swallowed, so keep away from young children.

Moisture and water

- **Do not** use this product near water or moisture.
- **Do not** use this product near a bath or sink, near a swimming pool or anywhere else that water or moisture is present.
- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.

Heat sources and flames

- Do not leave this product in high temperatures as electronic devices and plastic parts may warp in heat.
- Keep it away from bright sunlight or heat sources, such as a radiator.

Ventilation

- **Do not** install this product in a confined space.
- Allow adequate ventilation to prevent heat build-up.
- **Do not** block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.
- For indoor use only.

Care and cleaning

- All care and cleaning operations should be carried out with the Soundbar unplugged from the mains power.
- Occasionally wipe the cabinet with a lint free cloth.
- Never clean the unit with liquids or solvents.

 
If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

This page is left intentionally blank

This page is left intentionally blank

Getting to know your Soundbar

2

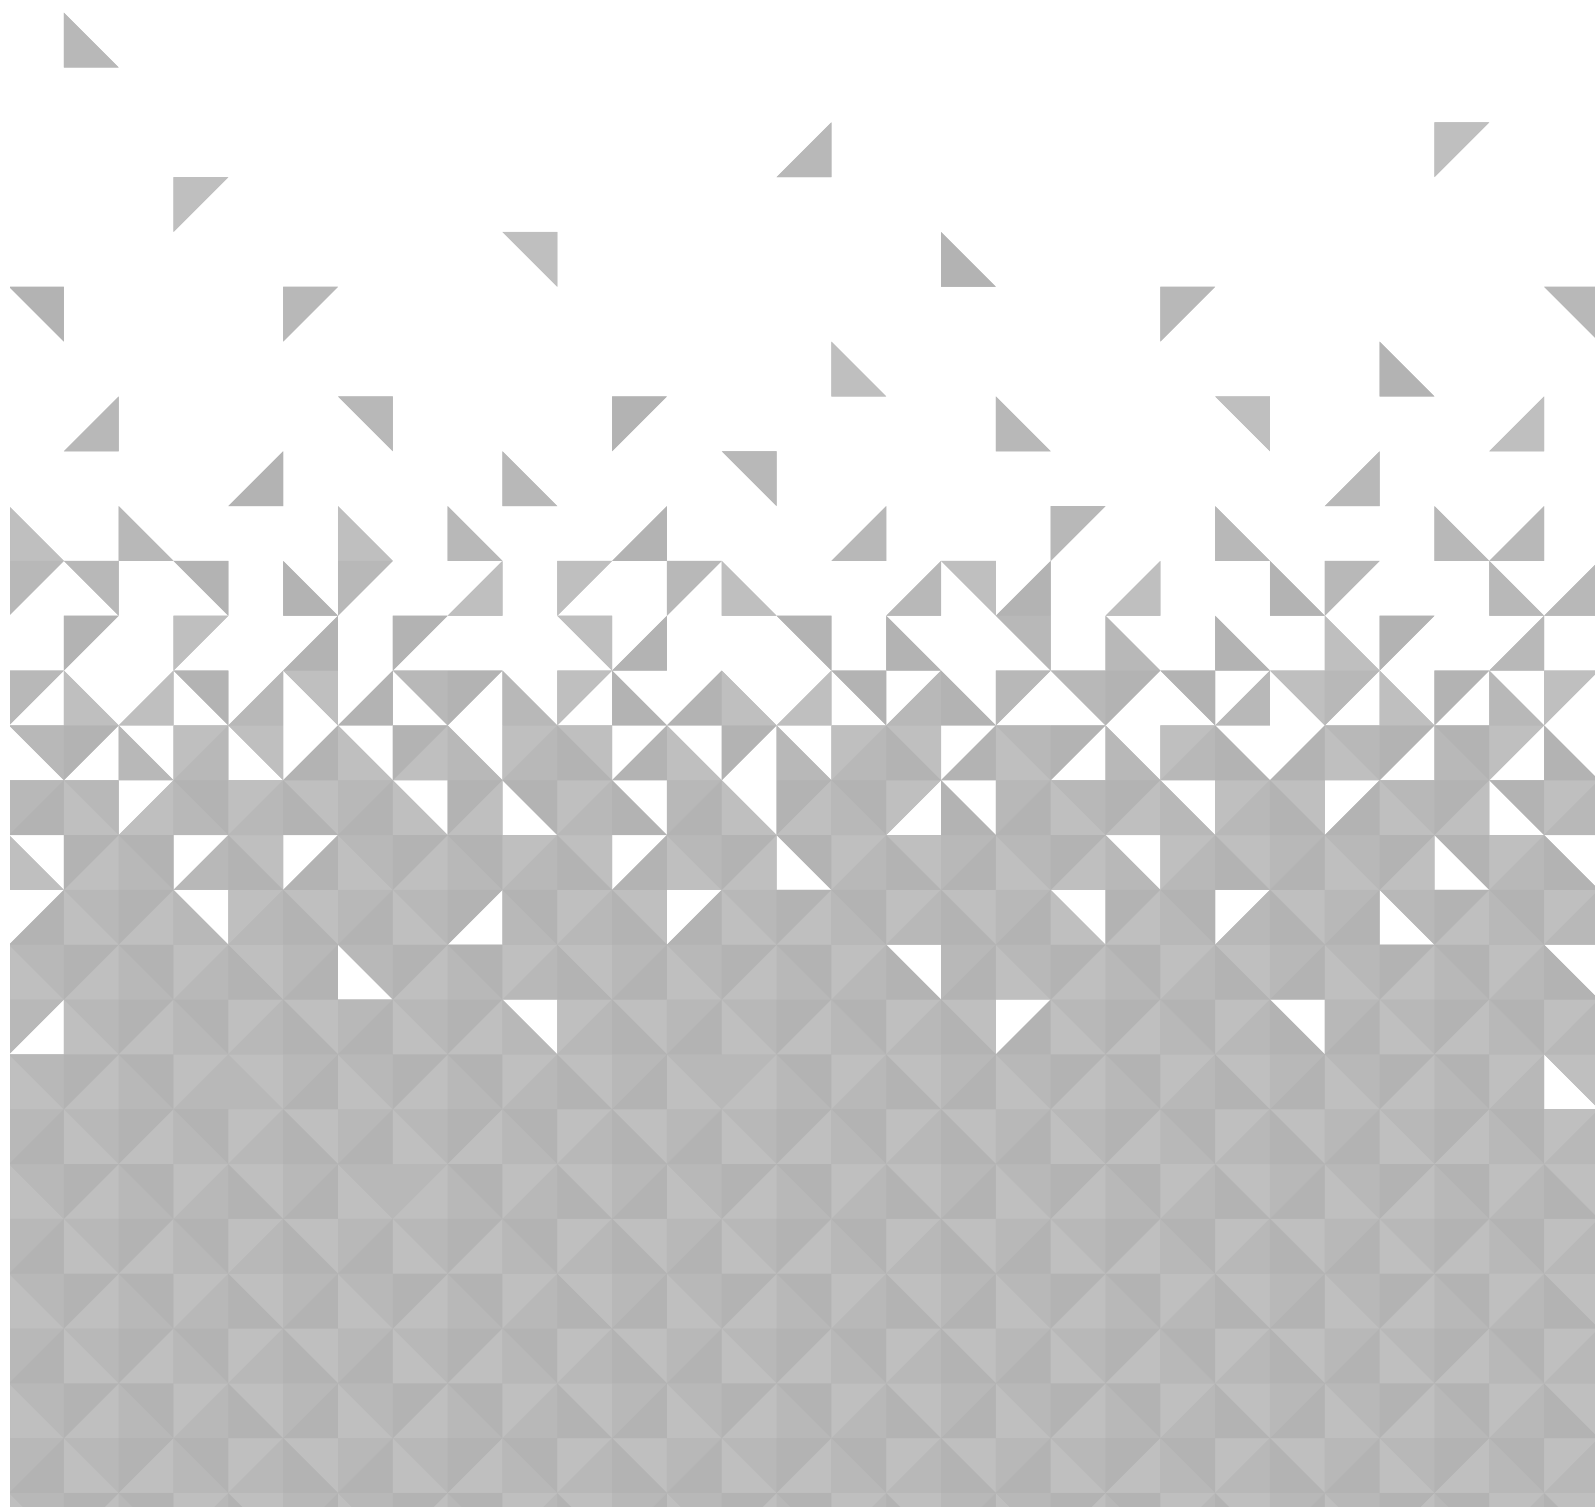

Getting to know your Soundbar

You'll be up and running in no time

 
Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your soundbar and ensure safe and correct installation and operation.


If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Accessories


1. Remote control
2. CR2025 battery (inside the remote control)
3. 3.5mm audio cable
4. RCA cable
5. Mains power adapter

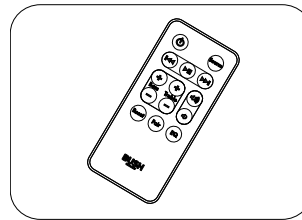


Remote control

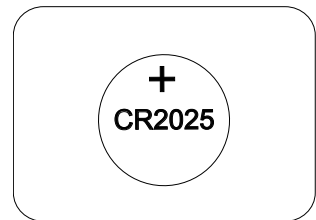 


CR2025 battery

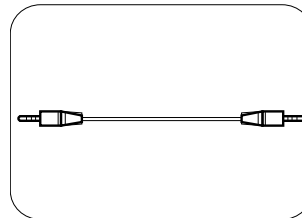 

 3.5mm audio cable

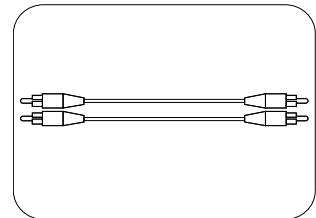

RCA cable

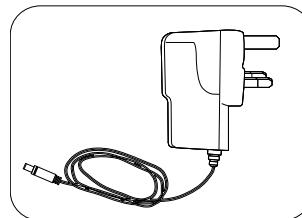 

Mains power adapter

Fig 7.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Getting to know your Soundbar

You'll be up and running in no time

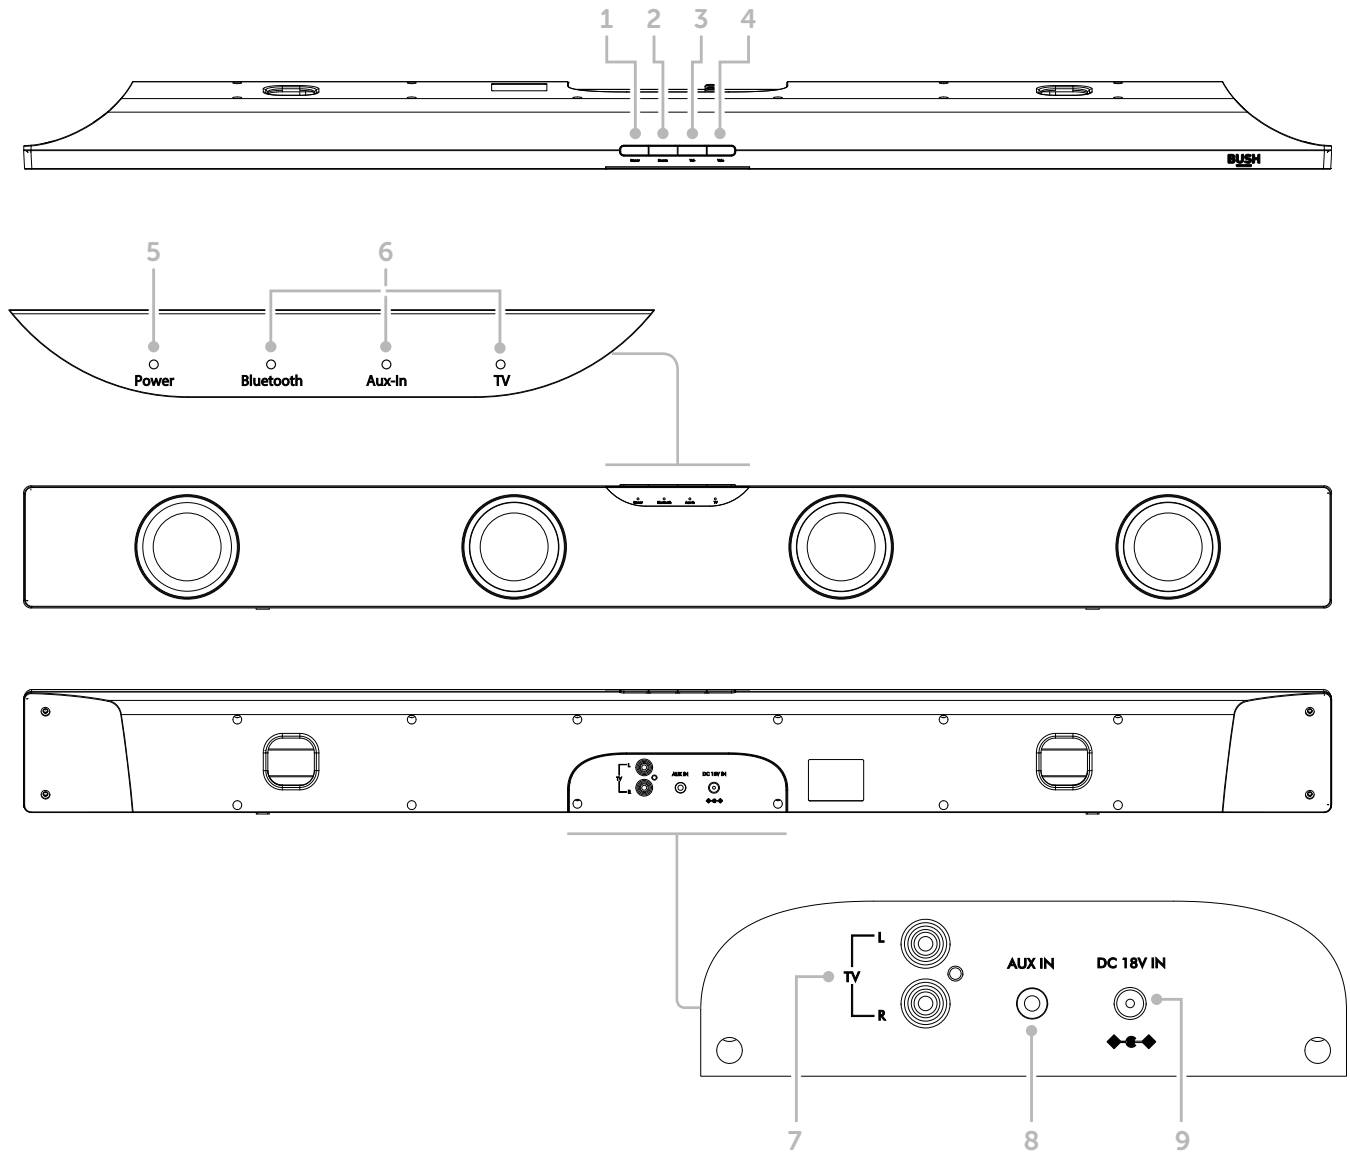 


Fig 8.

- | | |
|---------------------------------------|---|
| 1. Power on/standby | 6. Blue audio source LEDs (Bluetooth/Aux-in/TV) |
| 2. Audio source (Bluetooth/Aux-in/TV) | 7. Analogue TV RCA inputs |
| 3. Volume - | 8. Aux-in socket |
| 4. Volume + | 9. Power input socket (DC in) |
| 5. Red power on/standby LED | |

or online at www.argos-support.co.uk if you still require further assistance, call one of our experts on 0345 600 3021.

Getting to know your Soundbar

You'll be up and running in no time

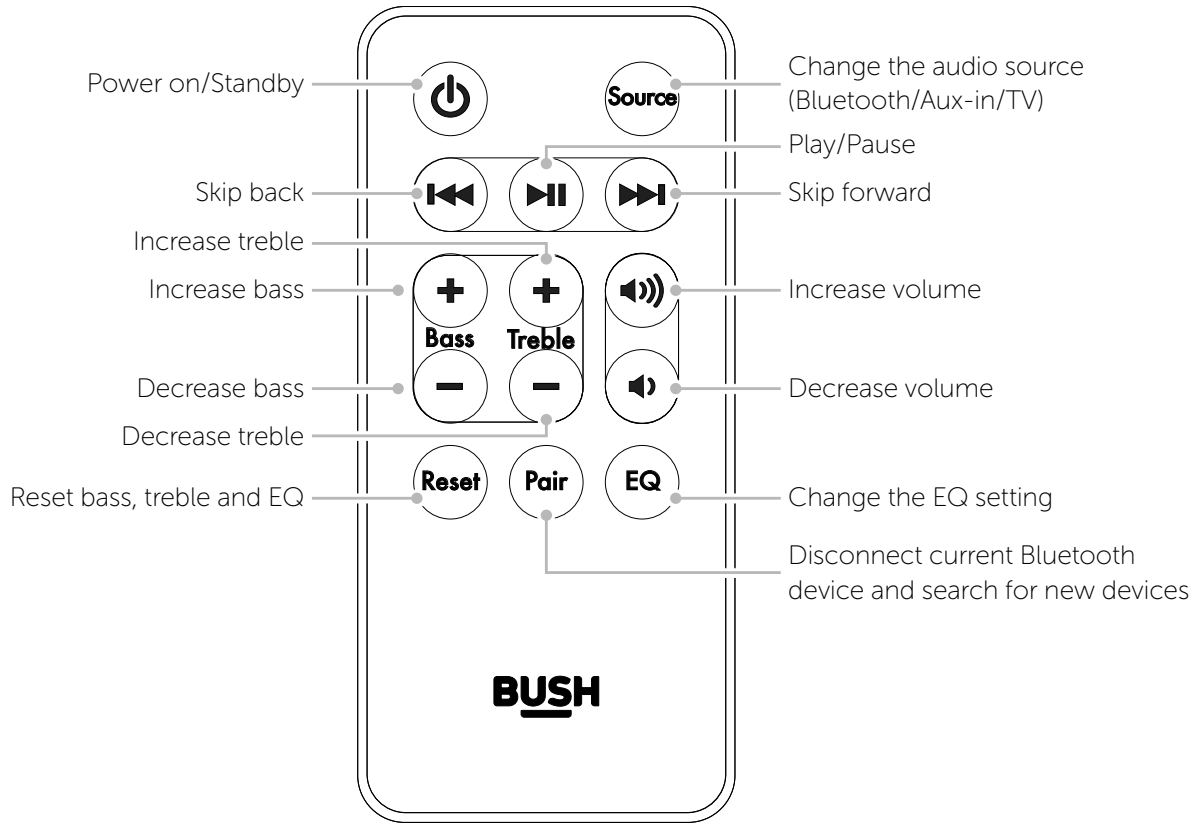 


Fig 9.

Remote control (before use)

Before use, pull the tab out from the bottom of the remote control to activate the pre-installed battery.

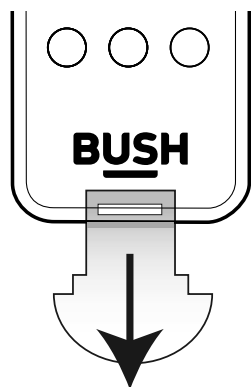 


Fig 10.

Changing the remote battery

As the battery becomes exhausted the operating distance will reduce. When the remote no longer functions, replace with a new CR2025 lithium battery

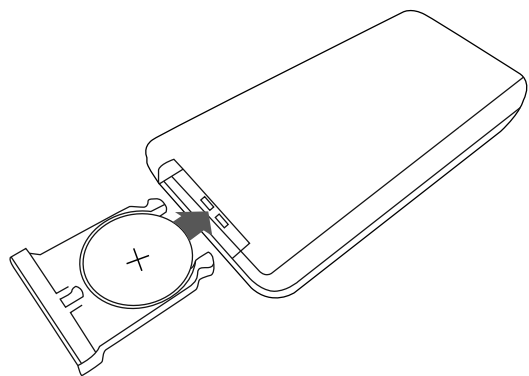 


Fig 11.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Getting to know your Soundbar

You'll be up and running in no time

Making the connections

Follow the connection guide below to connect your soundbar using the left and right RCA sockets and the Aux in socket. Please do not switch on the mains power until all required connections have been made.

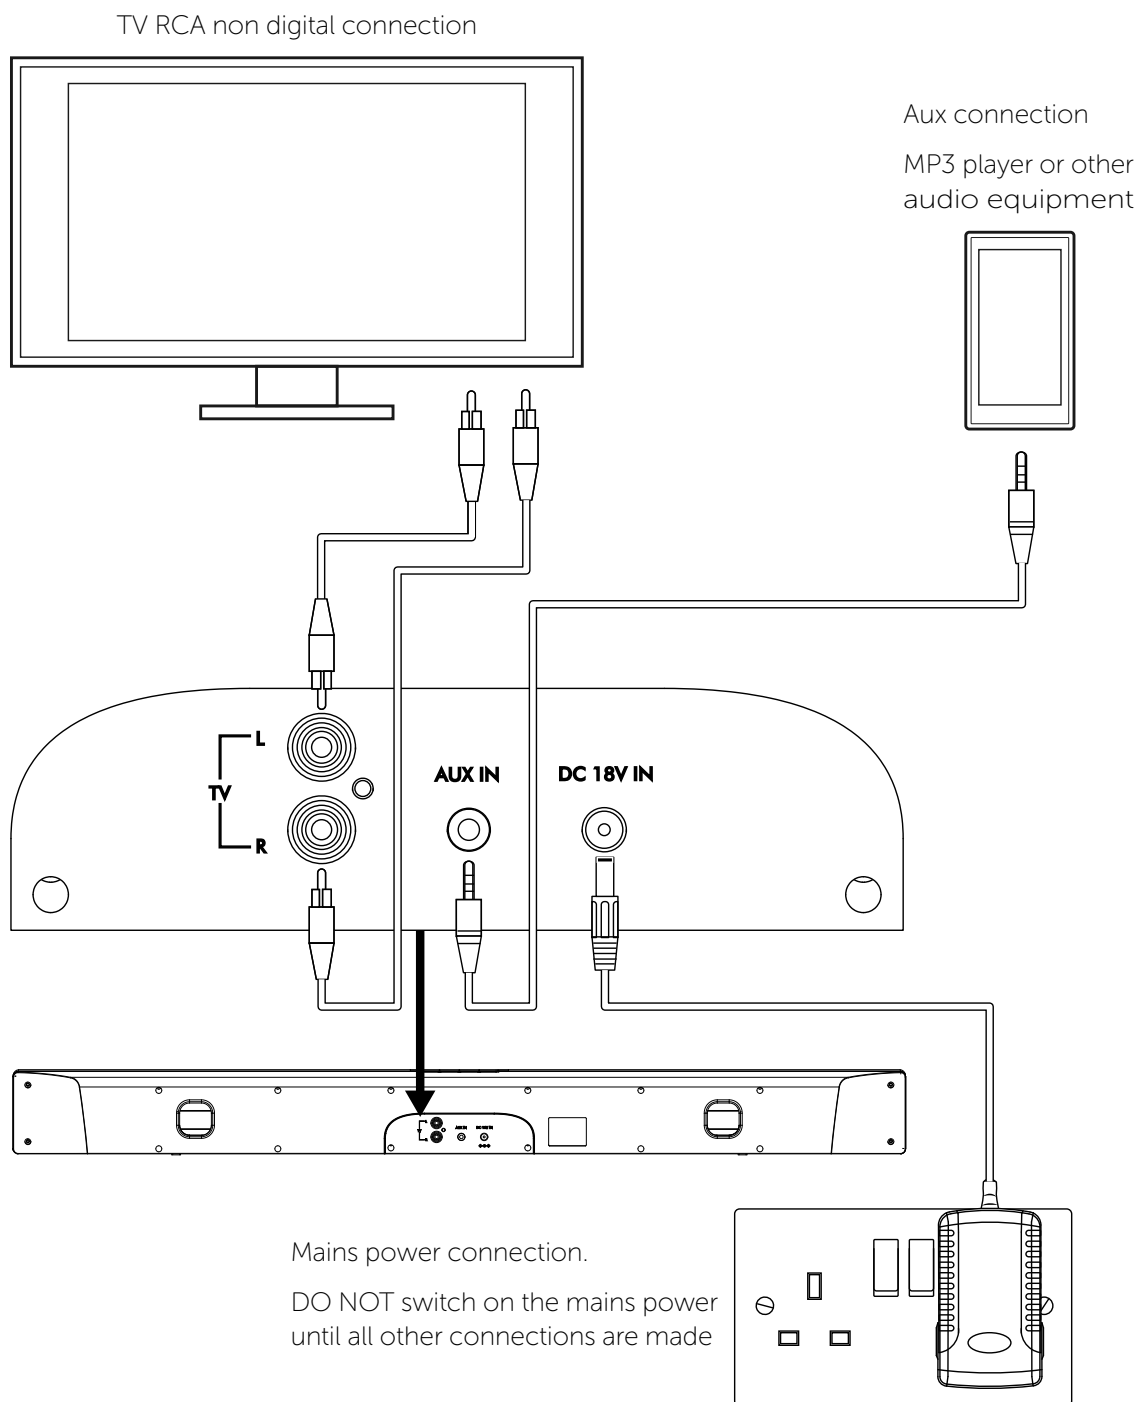 



Fig 12.

or online at www.argos-support.co.uk if you still require further assistance, call one of our experts on 0345 600 3021.

This page is left intentionally blank

Using your Soundbar

 3

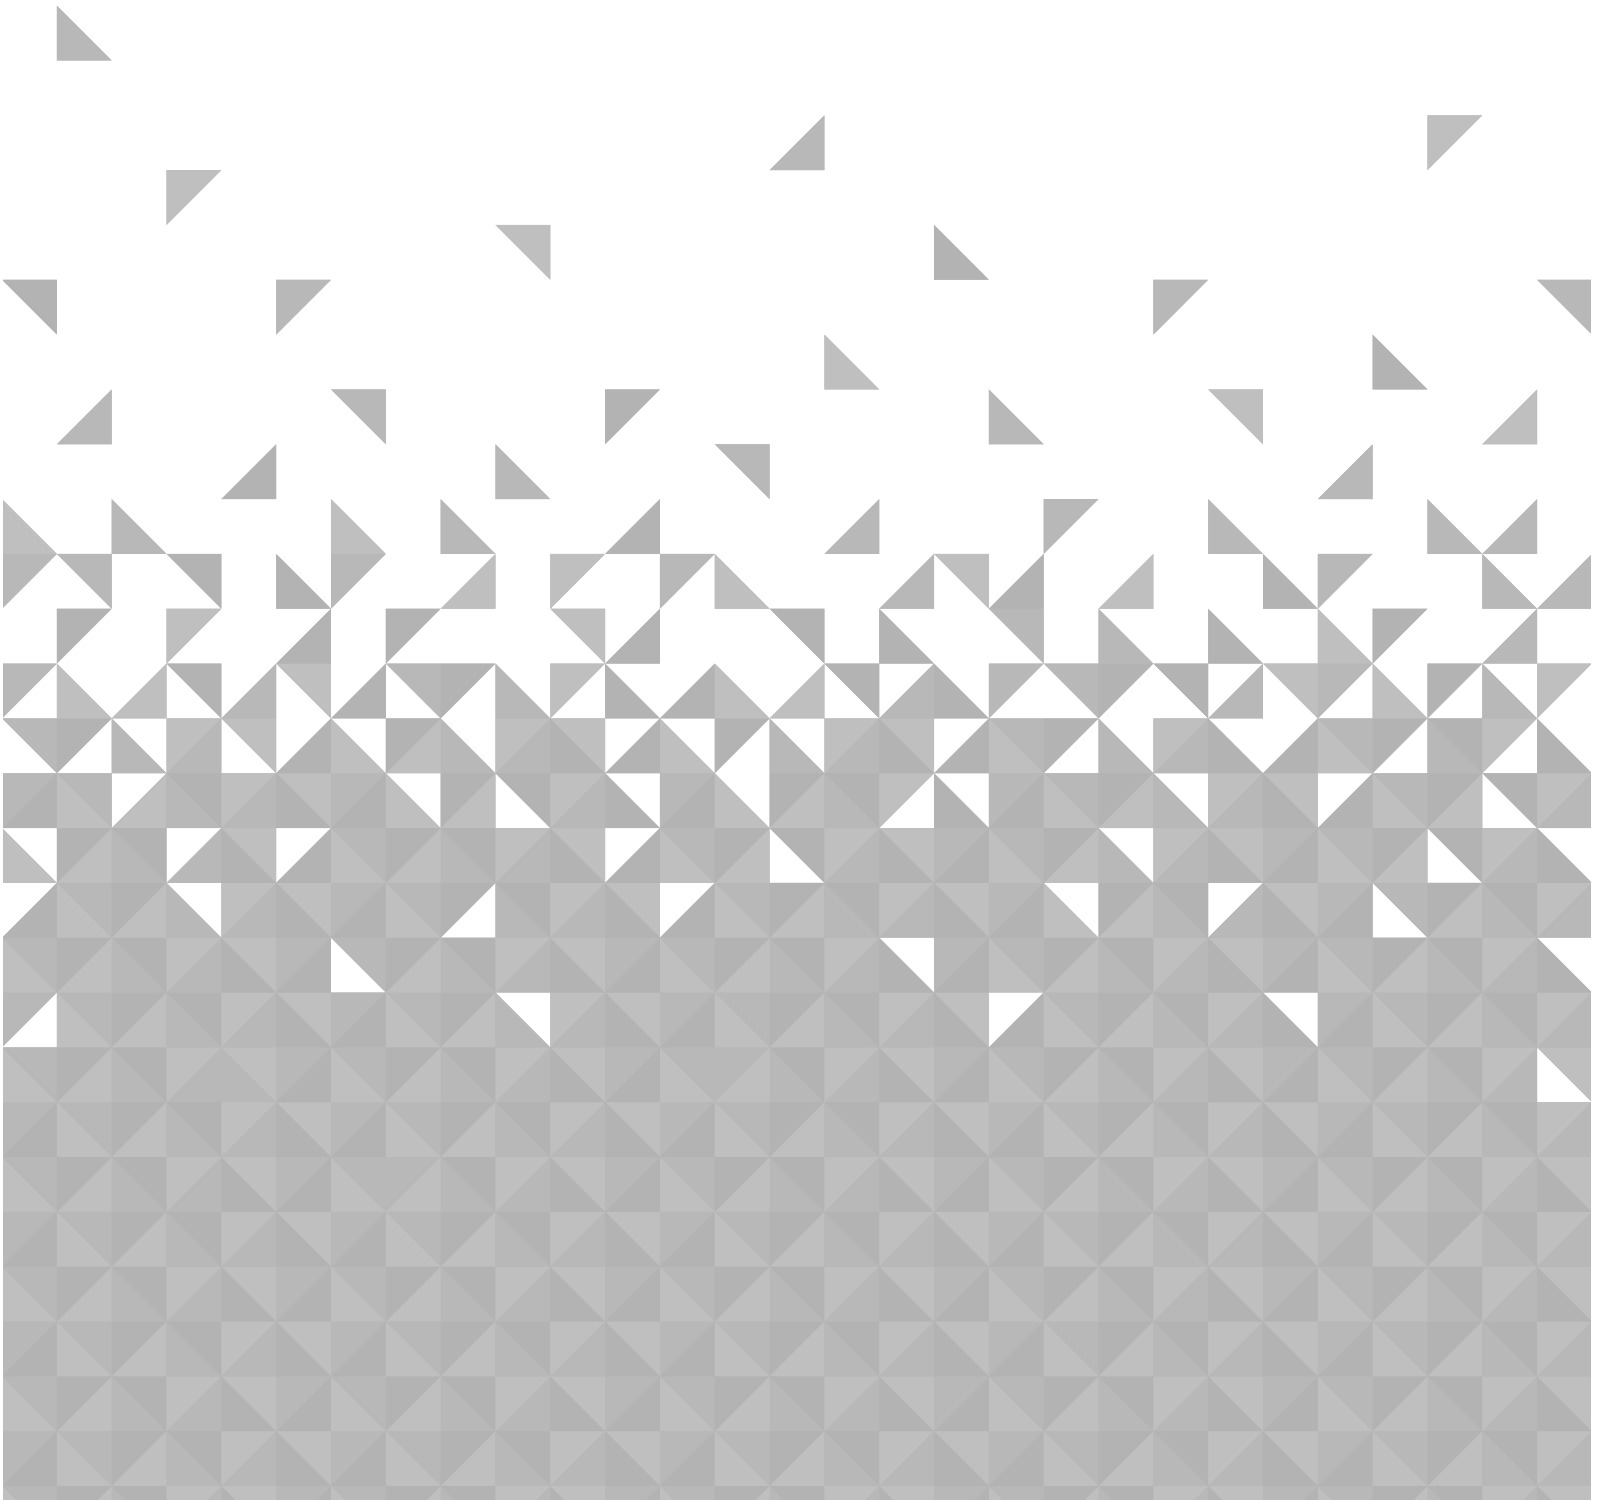

Using your Soundbar

Let's get started

Power on

Press and release the Power button on the top of the product or on the remote control. Your Soundbar will switch on in Bluetooth mode. A tone will sound and the blue LED behind the front lens will flash quickly whilst your product searches for Bluetooth devices.

Standby mode

Press and release the Power button on the top of the product or on the remote control. Your Soundbar will go to Standby mode. The red LED behind the front lens will flash slowly in Standby mode.

Note: This product is designed to go to STANDBY mode automatically after 15 MINUTES (approximately), if it does not receive an audio signal. Press and release the Power button on the Soundbar or on the remote control to switch your product back on again.


Change the mode

Press and release the Source button on the top of the Soundbar or on the remote control to change between Bluetooth, Aux in and TV modes.


The blue LED behind the front lens will move to indicate the current mode.

Note: Approximately 60 seconds after you have selected the mode (Bluetooth/Aux in/TV), the LED indicator will turn off. When you press any button on the remote control, the LED will turn back on again, to indicate the current mode. A further press of the remote control will activate the function required.

Adjusting the volume

Vol- (on the soundbar)/ (on the remote)

- Press and release to decrease the volume in steps.
- Press and hold to progressively decrease the volume.

Vol+ (on the soundbar)/ (on the remote)

- Press and release to increase the volume in steps.
- Press and hold to progressively increase the volume.

Note: You will hear an audible alert when the minimum or maximum volume level has been reached.

Bass or Treble enhancement

The Bass and Treble settings each range from -3 to +3.

1. Press and release the Bass or Treble + or - button on the remote control to adjust the Bass or Treble as appropriate.
2. Press and release the Reset button on the remote control to reset your Soundbar to its EQ, Bass and Treble settings.

Equaliser (EQ)

There are 4 EQ settings available on your Soundbar. These are Music, News, Movie* and Flat.

* Movie is the default setting and your Soundbar will be set to this when you first use your product.

1. Press and release the EQ button on the remote control to cycle through the available options.
2. Press and release the Reset button on the remote control to reset your Soundbar to its EQ, Bass and Treble settings.

Using your Soundbar

Let's get started

Pairing with a Bluetooth device

Before you can use your Sound bar in Bluetooth mode with your TV or other Bluetooth capable device, you need to 'pair' it.

1. When you first power on your Soundbar or when you change the mode to Bluetooth, the blue LED on the front of the product will flash quickly whilst your product searches for Bluetooth devices.
2. On the device that you would like to connect to your Soundbar via Bluetooth (e.g. TV/iPhone/iPad/Android/other phone/Tablet/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

Note: If necessary, refer to the instructions for your device to add or set up Bluetooth.

3. When found, your Soundbar will be displayed as 'BUSH Sound bar'. Select the device name to begin pairing.

Note: If your device requests a password, please enter '0000' to complete the device pairing.

4. When pairing is complete a tone will sound and the blue LED will change to be continuously on (not flashing).

Note: After approximately 60 seconds the blue LED will turn off. You can press any button on the remote control, to turn the LED back on again.

5. Now that you have paired your device with the Soundbar, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.
6. Your device will remain paired with the Soundbar unless you decide to disconnect or 'unpair' it.

Note: You can press and hold the Pair button on the remote control to unpair your current device and search for new devices.

Controlling a paired device

Once paired you can either use the controls on the connected audio device to play/pause, skip tracks etc., or you can use the control buttons on the Soundbar remote control.

 Play/Pause

 Press and release to skip forward

 Press and release to skip back

Aux in mode

Check that your Soundbar is in Aux in mode. If you are not already in Aux in mode, press and release the Source button on the Soundbar or on the remote control to go to Aux in mode. The blue LED behind the front lens will move to indicate this.

1. Connect one end of a 3.5mm audio cable to the headphone (or auxiliary out) socket of your secondary device.
2. Connect the other end to the Aux in socket on the back of your Soundbar.
3. Press the Play button on your external device to start playback through the Soundbar.
4. To gain optimal volume levels, adjust the volume level on both the secondary device and on the Soundbar.

Note: It is recommended that you unplug the audio cable from the Aux in socket on the back of the Soundbar, after you have finished listening to your external device.

Using your Soundbar

Let's get started

TV mode

Check that your Soundbar is in TV mode. If you are not already in TV mode, press and release the Source button on the Soundbar or on the remote control to go to TV mode. The blue LED behind the front lens will move to indicate this.

1. Connect the Left (white) and Right (red) RCA cables supplied to the Left (white) and Red (right) sockets on the back of the Soundbar.
2. Connect the other end of the cables to the Left and Right sockets on your TV.
3. The sound output from your TV, will now be via your Soundbar.
4. To gain optimal volume levels, adjust the volume level on both the TV and on the Soundbar.

 
If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions,

This page is left intentionally blank

This page is left intentionally blank

Other information

4

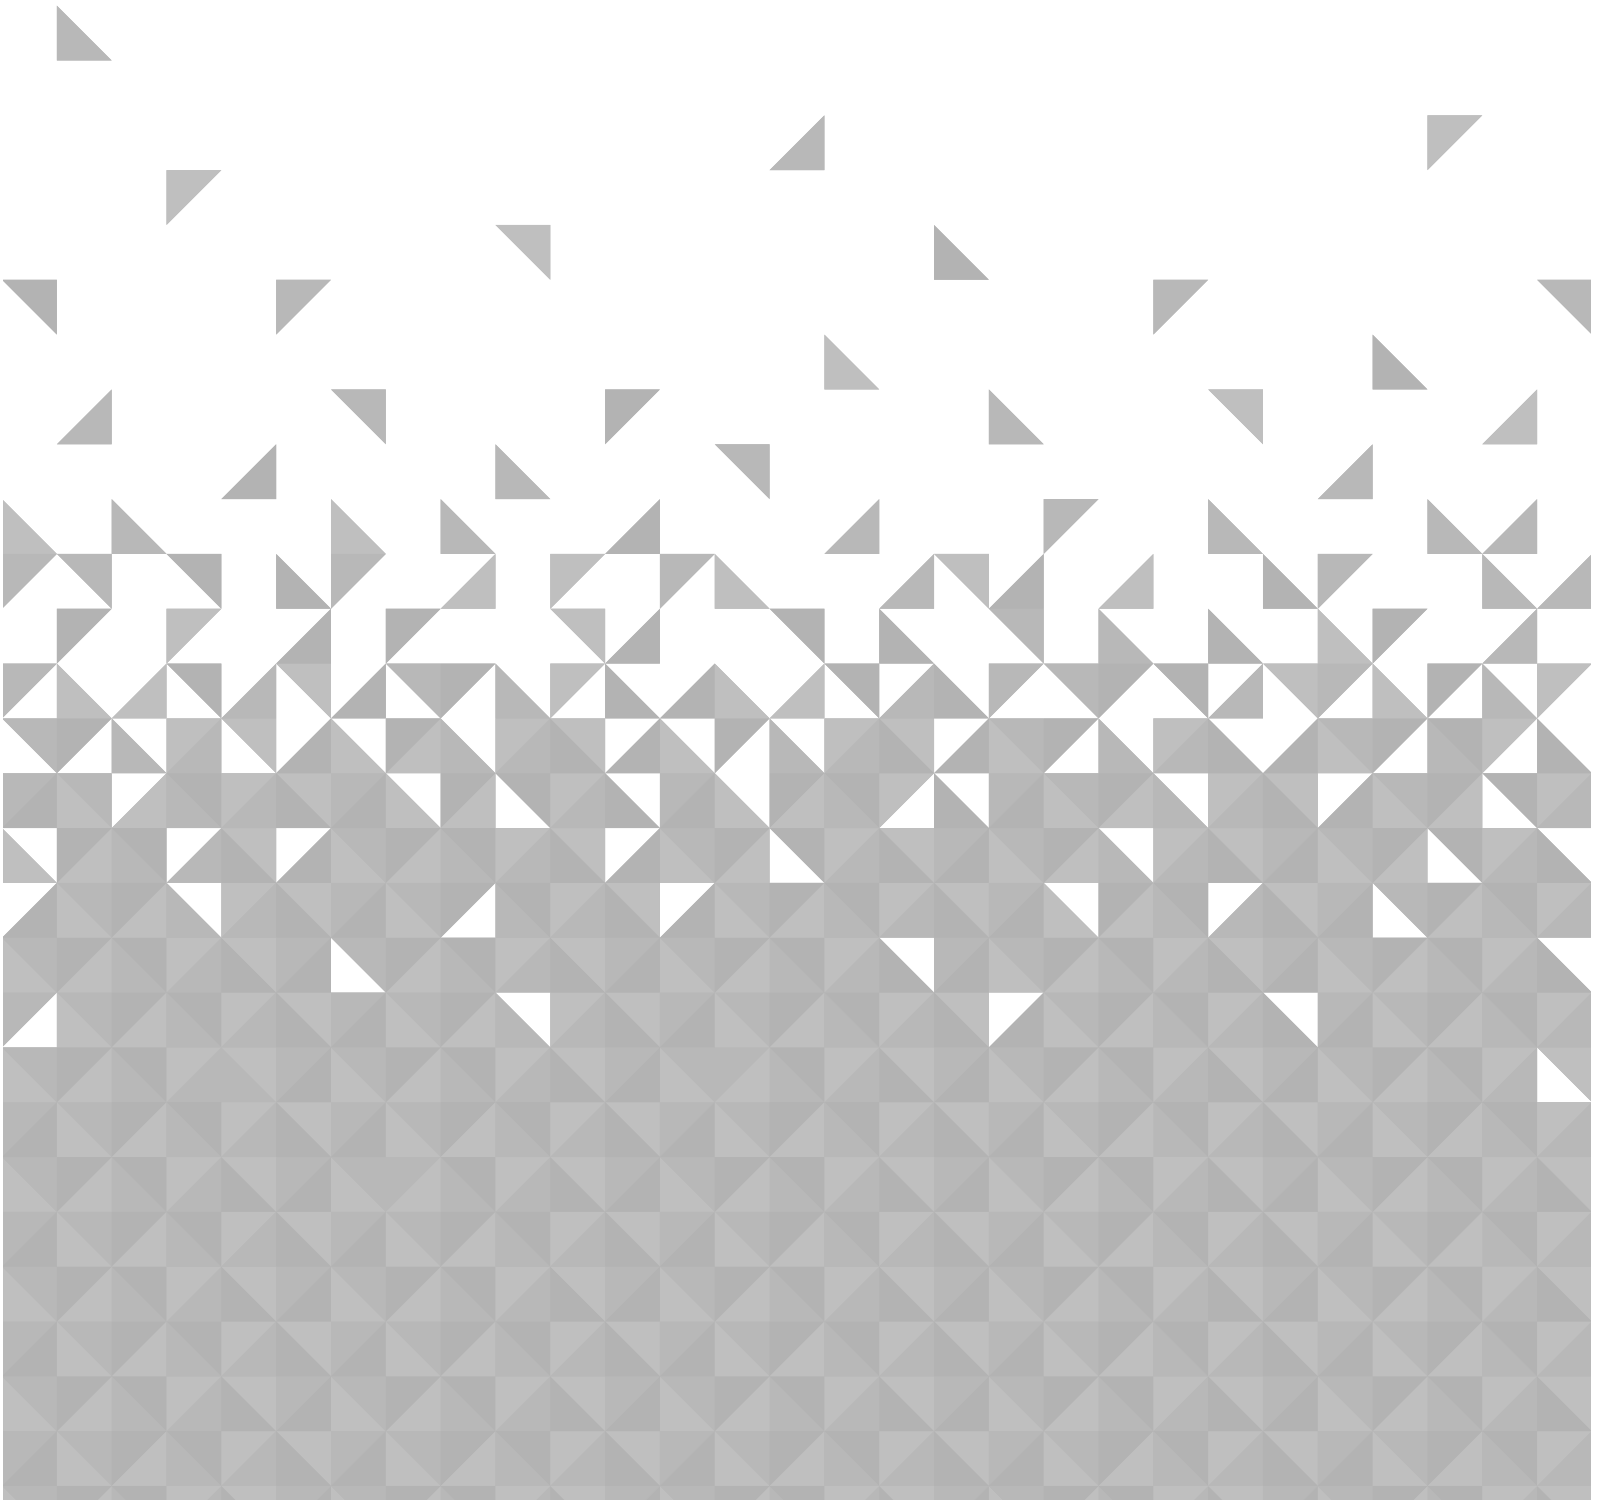

Other information

Helpful technical information

Technical specification

Power output	100W Max
Frequency response	60Hz - 20KHz \pm 3dB
Input sensitivity	750 mV
Main unit	
Power supply	INPUT: 100-240V ~ 50-60Hz OUTPUT: 18V \equiv 2A
Power adapter make and model	Dong Guan Jiu feng Electronic Co., Ltd , Model: JF036WR-1800200BH
Power consumption	42W
Standby power consumption	\leq 0.5W
Full range speaker drivers	Impedance: 4 Ohm, 65mm (2.5") Frequency response: 100Hz ~ 20KHz
Subwoofer	Impedance: 8 Ohm, 65mm (2.5") Frequency response: 60~250Hz
Dimensions	Soundbar: 900 x 84 x 60mm
Mains cable length	1.5M
Remote control	
Battery	1 x CR2025
Bluetooth	
Bluetooth compatibility	HFPV1.5, A2DP1.2, AVRCP1.4, GAVDP1.2, IOP
Bluetooth version	V2.1+EDR
Pairing name	BUSH Sound bar

 
If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

This page is left intentionally blank

This page is left intentionally blank

Product support

5

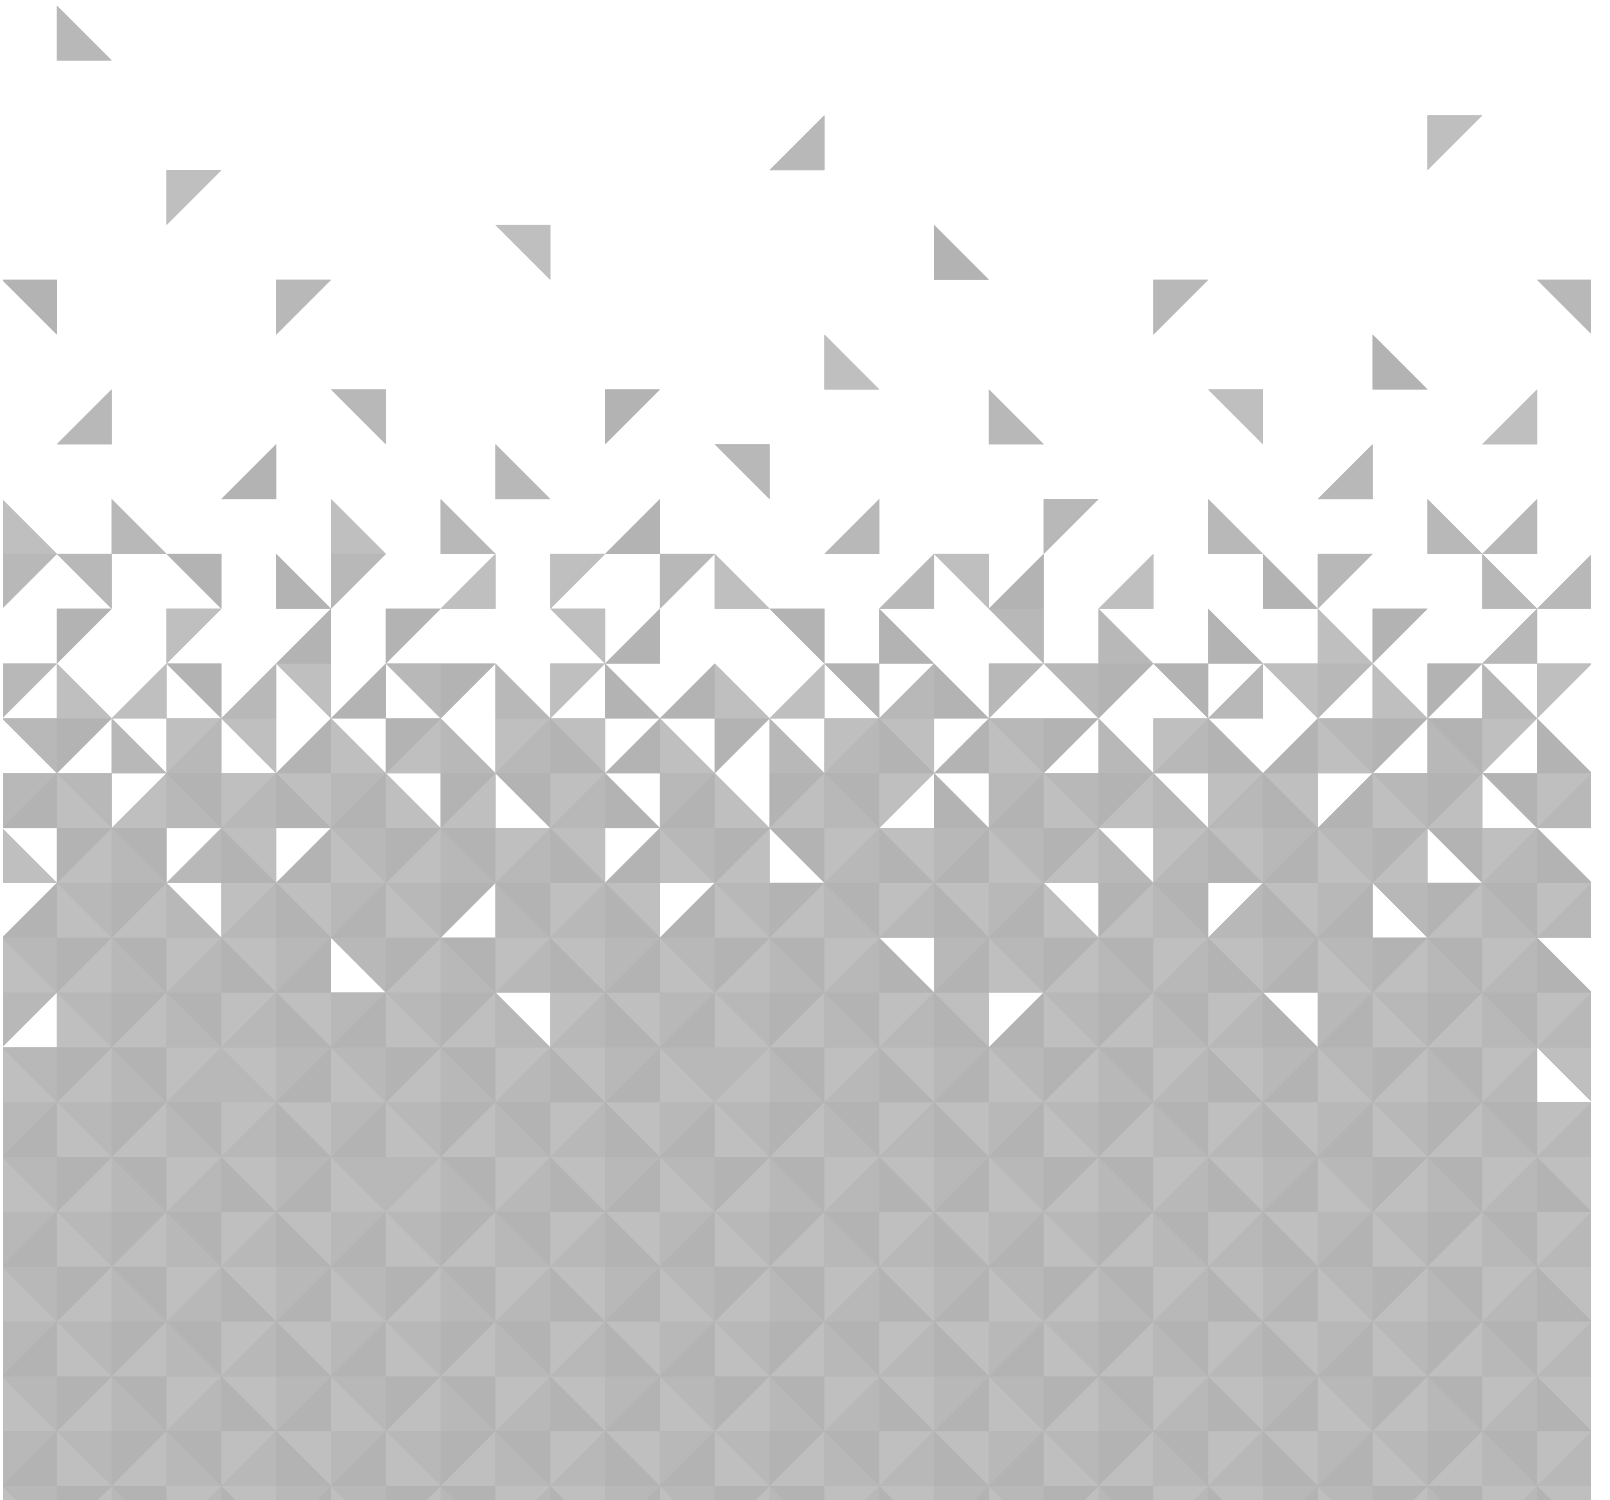

Product support

Help is always at hand

Troubleshooting

No power:

- Check the power plug connection at the back of the Soundbar and at the wall socket.
- Check that you are not in Standby mode. Press and release the Power button on the Soundbar or on the remote control.

Unable to pair with a Bluetooth device:

- Check that you are in Bluetooth mode.
- Ensure that you are within range of the Soundbar for Bluetooth functionality, 10 metres or less (33 feet or less).
- Check that the device you are attempting to pair with supports A2DP stereo audio transmission.
- Move any other unnecessary Bluetooth devices/electrical equipment away from the Soundbar and if possible, turn them off or disable their Bluetooth functionality.

No sound / Sound distortion:

- Adjust the volume
- Increase the volume on the secondary device and on your Soundbar.
- Check that you are in the correct mode for the music that you wish to listen to.

Remote control does not work:

- Reduce the distance between the remote control and the Soundbar.
- The remote control battery may be exhausted. Replace the remote control battery.
- The remote control needs clear line of sight, without obstacles, to function correctly. Direct sunlight or other bright light sources shining on the remote sensor may affect the performance.

Source LEDs turn off:

- The Source LEDs on the Soundbar have been designed to turn off after approximately 60 seconds so that they do not interfere with your TV viewing. Press any button (except Power) on the remote control to turn the LEDs back on again.

Soundbar powers off:

- Your Soundbar has been designed to automatically go to Standby mode after approximately 15 minutes without an audio signal, to save power. Press the Power button on the Soundbar or on the Remote control to turn your Soundbar back on again.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Soundbar is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 600 3021***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.	<input type="text"/>	You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear or base of your product
Serial number	<input type="text"/>	
Date of purchase	<input type="text"/>	This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For Security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges.

or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on **0345 600 3021**.

Product support

Help is always at hand

Disposal



- Disposal of your old product. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused
- When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- Please make yourself aware of the local collection system for electrical and electronic products.
- Please act according to your local rules and do not dispose of your old products with your normal household waste.
- The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Bluetooth®

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks is under license.

CE

This product is intended for use within the UK. This equipment complies with the essential requirements of the Radio Equipment Directive 2014/53/EU.

Declaration of Conformance

Hereby, Argos Ltd, declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting <http://www.argos-support.co.uk/>

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

Product support

Help is always at hand



Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on **0345 600 3021**.

This page is left intentionally blank

This page is left intentionally blank

BUSH

Contact:

www.argos-support.co.uk

Helpline: 0345 600 3021