
 


# BUSH

## Instruction manual

CD-78D

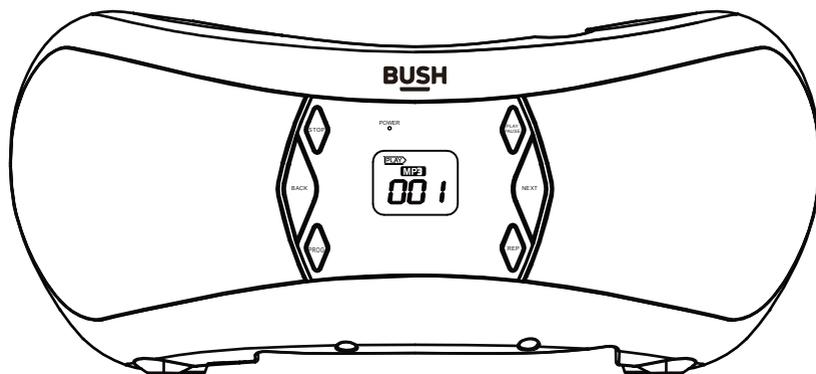



You'll soon be enjoying your new CD Boombox.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

## Help and Guidance

We're here to help you get the most from your CD Boombox. Should you require any guidance, a simple solution can often be found online at:

[www.argos-support.co.uk](http://www.argos-support.co.uk)

If you still require further assistance, call one of our experts on **0345 604 0105**

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Contents

## 1 Safety information

Safety information 6

## 2 Getting to know your CD Boombox

Ready? Let's begin 10

Accessories 10

Your CD Boombox 11

Fitting the batteries 12

Auxiliary connection 13

## 3 Using your CD Boombox

Setting up your CD Boombox 15

Using the Radio 16

Using the CD Player 18

Using the control panel 19

Aux IN with the CD Boombox 21

Using the carrying handle 21

## 4 Other information

Technical specification 24

## 5 Product support

Troubleshooting 26

Disposal and Declaration of Conformance 27


Help and assistance 29

Guarantee 31

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 604 0105.



# Safety information 1

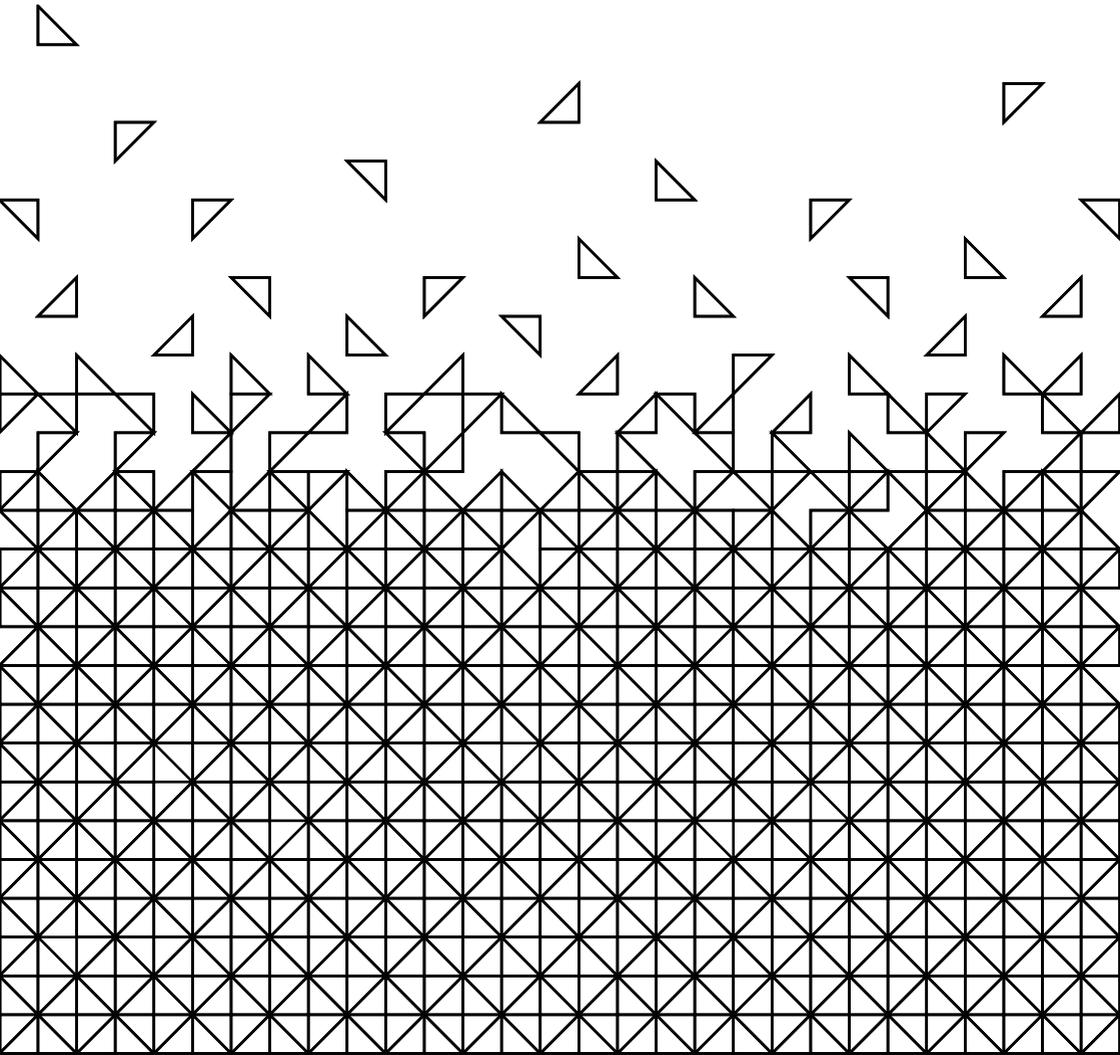



## Safety information

**Important** - Please read these instructions fully before installing or operating

Your Radio should be treated with care. The information below has been provided in the interest of safety and will help you to enjoy this product and the benefits it brings for many years.

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry
- Do NOT leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- Do NOT leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
- Do NOT block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product
- Do NOT store in dusty or dirty areas.
- Do NOT attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- Do NOT use your Radio near emergency/intensive care medical equipment; if you have a pacemaker fitted or during an electrical storm.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

- If the Radio will not be used for a long period of time, make sure that all of the batteries are removed from the battery compartment.
- Do NOT use harsh chemicals, cleaning solvents or detergents to clean the product. Wipe with a damp (not wet) soft cloth to clean.

## WARNING:

### Batteries

**Warning:** Incorrect installation of batteries may cause battery leakage and corrosion, resulting in damage to the remote control.

Do not mix old and new batteries, or batteries of different types.

Do not dispose of batteries with normal household waste, take to a local recycling centre.

The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.



To prevent possible hearing damage, do not listen to this radio at high volume levels for long periods of time.



Warning: To prevent the spread of fire, keep candles or other open flames away from this product at all times.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Please read these instructions fully before installing or operating



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of "uninsulated dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons




This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Getting to know your CD Boombox

2

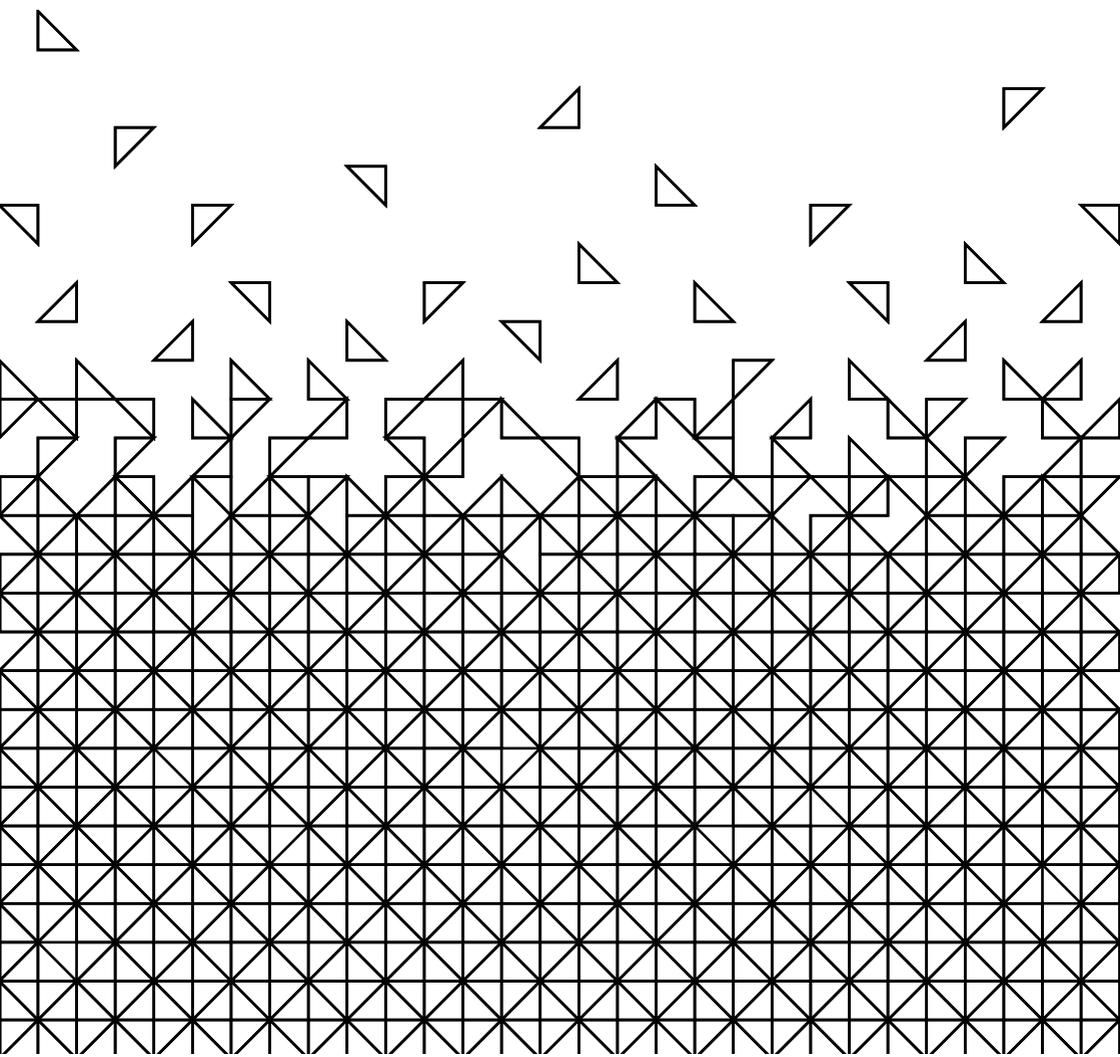

# Getting to know your CD Boombox

You'll be up and running in no time

## Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.



If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

## Accessories

### Welcome

Congratulations on purchasing your CD Boombox. You can now listen to both CD's and the FM / AM radio.

### You should have


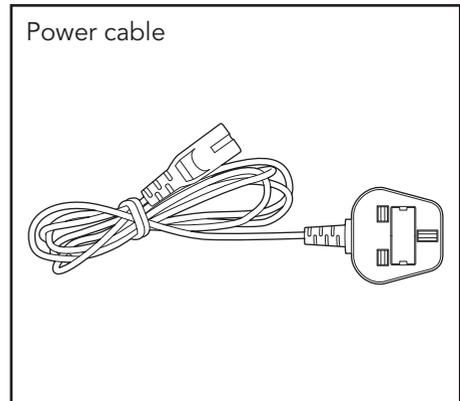
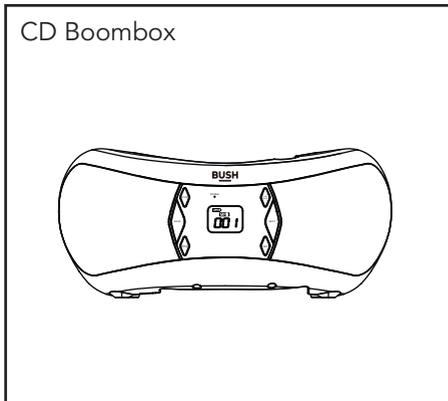


### You may also need

- 8 x type C batteries
- Aux in line

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**


# Your CD Boombox

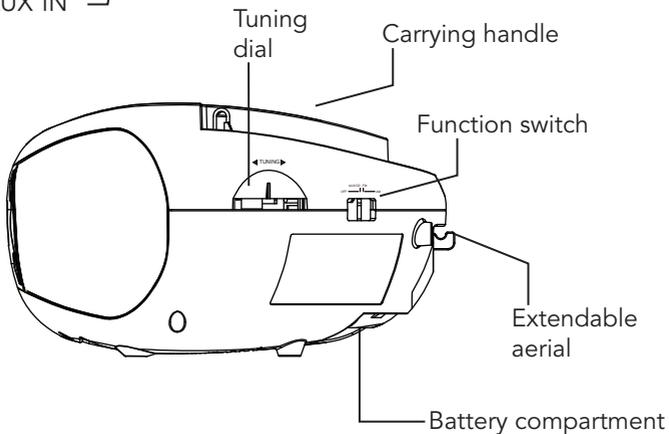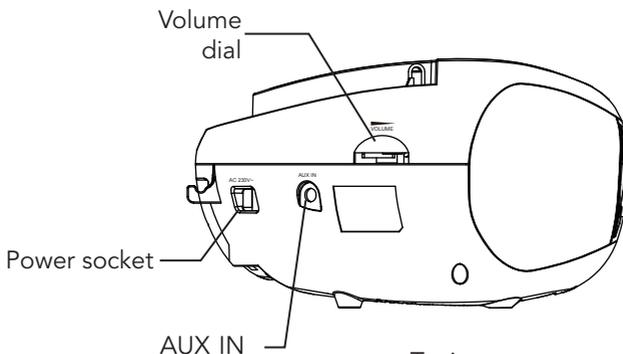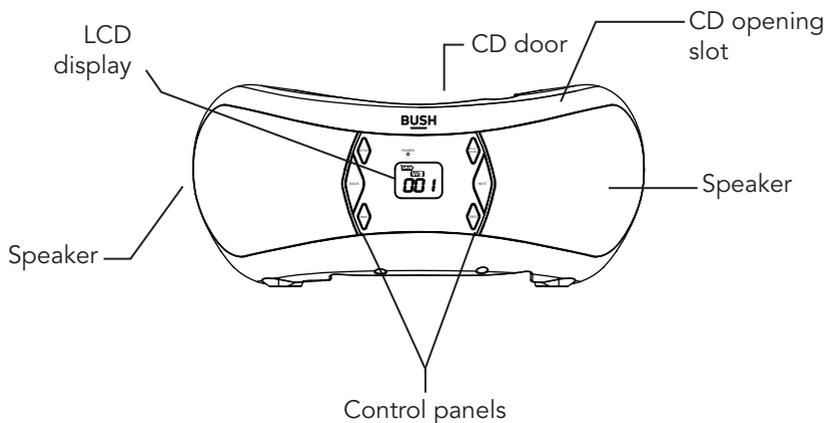

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 604 0105.


## Fitting the batteries

Push down on the arrow head under the OPEN mark on the top of the battery compartment and slide the battery compartment cover off the CD Boombox.

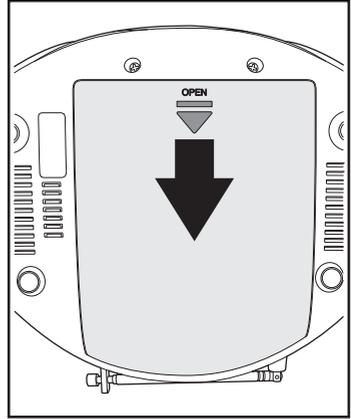


Insert the eight type C batteries following the directions in the bottom of the battery compartment.

- Ensure the + & - on the batteries are correctly aligned with the + & - marks in the battery compartment.

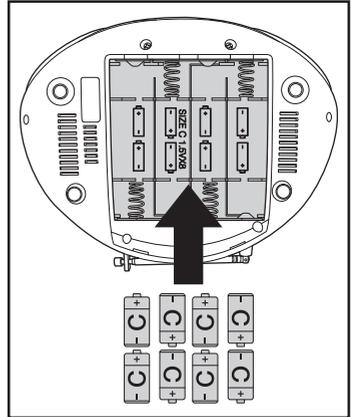

Slide the battery compartment cover back over the battery compartment until the three tabs at the top lock in place.

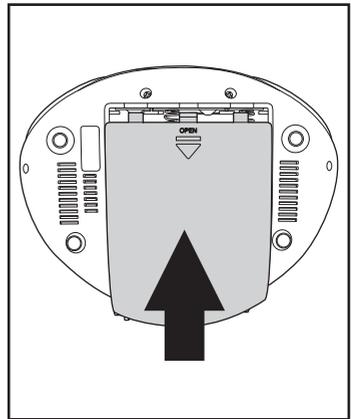

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Getting to know your CD Boombox

You'll be up and running in no time

## Auxiliary connection

Using a 3.5mm audio input connection cable (not included), allows for a quick and easy connection to an external sound source.

1. Connect one end of a 3.5mm audio connection cable to the headphone or auxiliary out socket of your secondary device, connect the other end to the Line in socket on the back of your Boombox.
2. Slide the Power/Mode switch on the back of the Boombox to CD/Line in.
3. Press the Play button on your external device to start playback through the Boombox speakers.
4. To gain optimal volume levels, adjust the volume level on both the secondary device and on the Boombox.

---


**Note:** It is recommended that you unplug the audio cable from the Line in socket after you have finished listening to your external device, as the CD player cannot be used whilst an audio cable is connected. Please wait for approximately 15 seconds after unplugging the audio cable, for the Boombox to return to CD mode.

---



# Using your CD Boombox


3

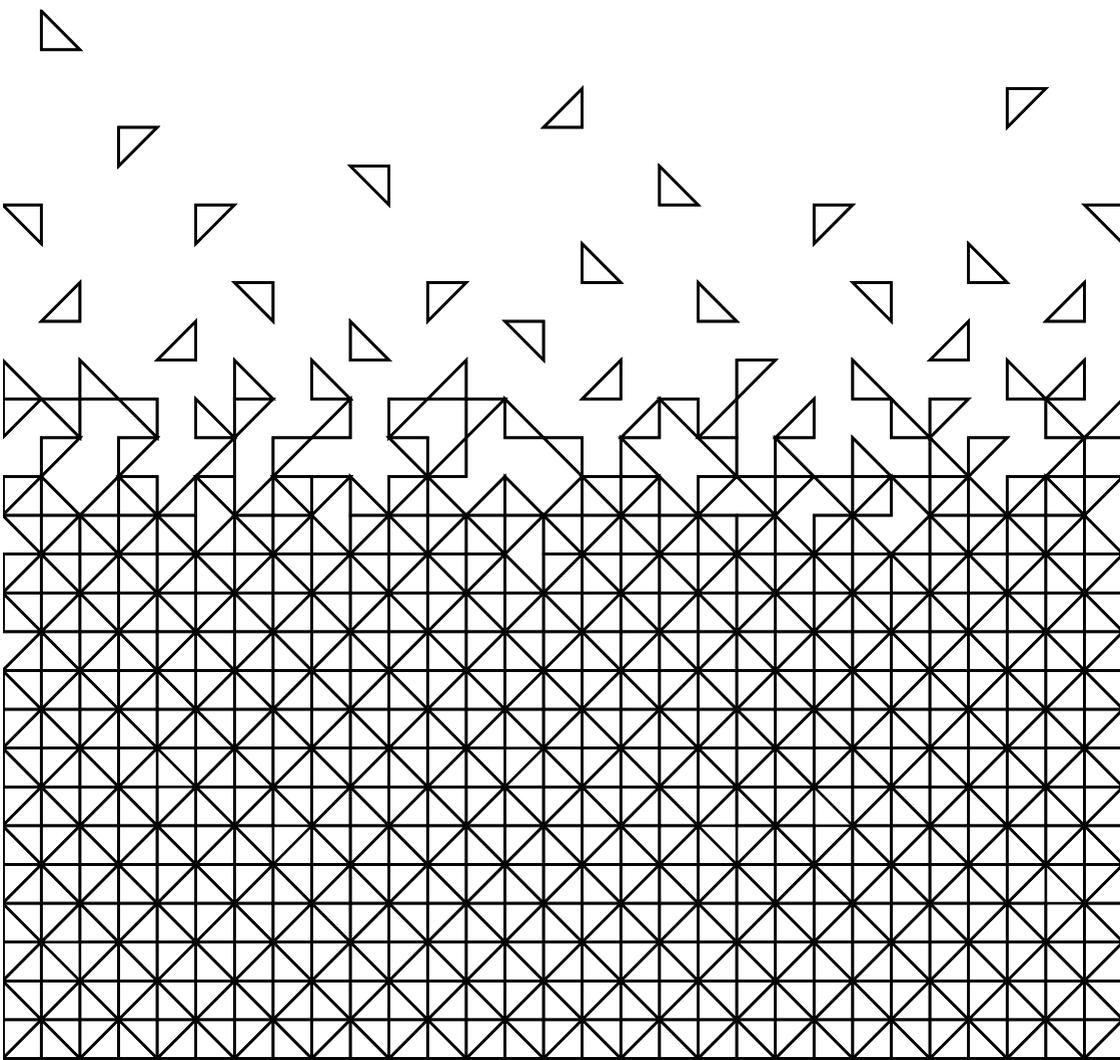

# Setting up your CD Boombox


## Using mains power

Plug the power cord into the power socket in the back of the CD Boombox.

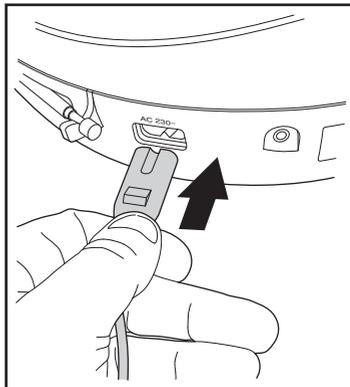


Insert the plug on the other end of the power cord into a mains socket and turn the power on if needed.

**Important:** The mains plug is used as the main disconnect device and must remain accessible when in use.

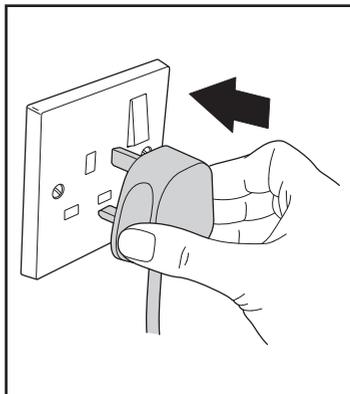

Slide the FUNCTION switch to either the CD, FM or AM depending on what feature you want to use.


Slide the mode switch to the OFF position to turn your CD Boombox off.

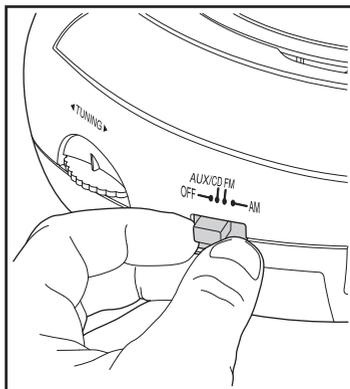

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**


# Using the Radio

Lift the aerial on the back of the CD Boombox upwards.

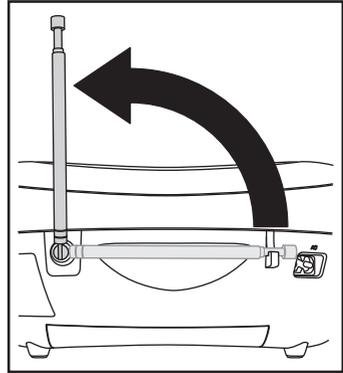


You will need to fully extend the aerial to get the best reception.

You can rotate the aerial to help to improve radio reception.

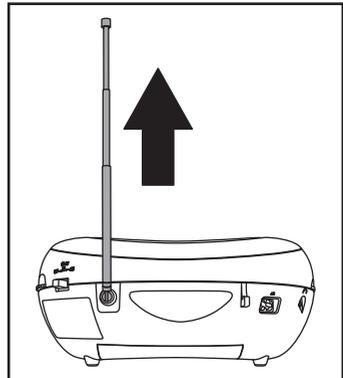


Slide the FUNCTION switch on the side of the CD Boombox to either FM or AM depending on the radio station you want to listen to.

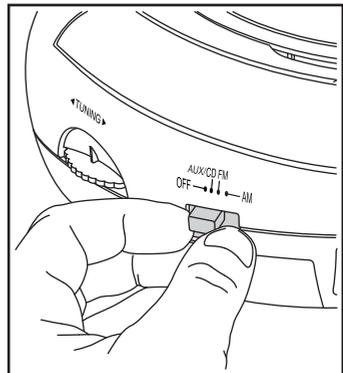


Tune the radio by turning the TUNING dial on the side of the CD Boombox to the correct frequency.

You can adjust the volume by turning the volume dial, on the opposite side of the CD Boombox clockwise to increase or anti-clockwise to decrease.

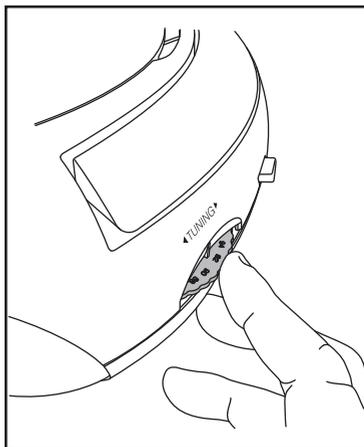

Slide the FUNCTION switch on the side of the CD Boombox to the OFF position when you have finished listening to the radio on your CD Boombox.

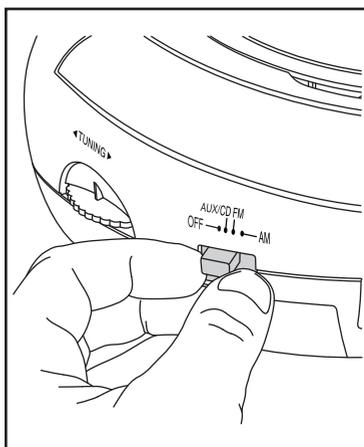

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**


# Using the CD player

Slide the FUNCTION switch on the side of the CD Boombox to CD.

The ‘--’ lights on the LCD display will flash if no CD is inserted then turn to ‘no’.


**Important:** This CD player can play standard CD's but also CD-R CD-MP3 and CD Rewritable discs.

**Do not** attempt to play CD-ROM, CDI, VCD, DVD or other computer program/game CD's.

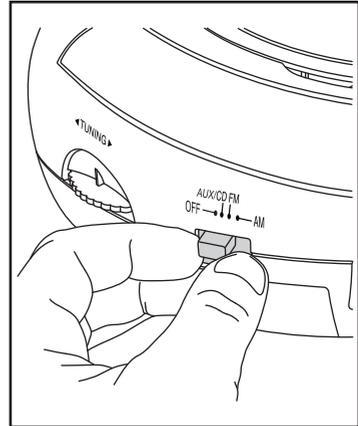


Place your finger or thumb into the CD opening slot on the top CD Boombox.

Lift the CD door upwards until fully open.

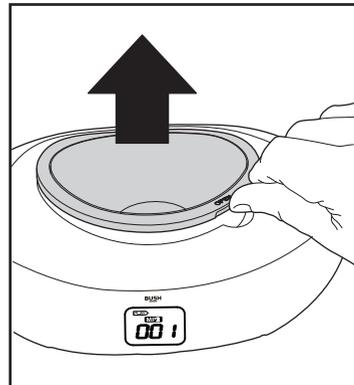

Place the CD in the CD player with the label facing upwards.



Align the hole in the middle of the CD with the post in the middle of the CD player and push down until the CD locks over the centre post.

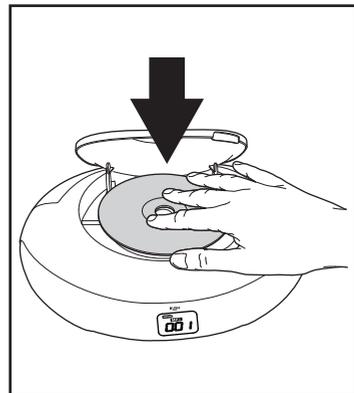

Push the CD lid down to close the top of the CD player.

The CD should start loading automatically, if this does not happen press the **PLAY / PAUSE** button on the control panel.

Once the CD has loaded the LCD display will show the number of tracks on the CD.

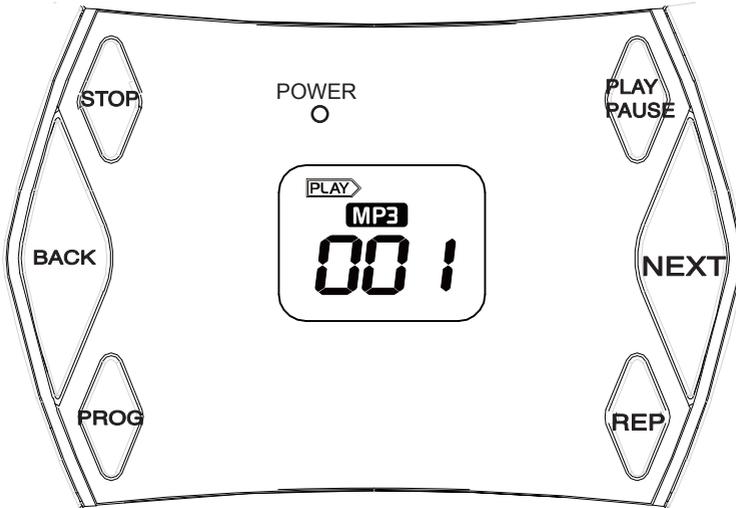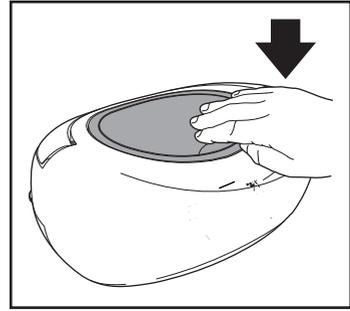

## Using the control panel

**STOP:** Press and release to stop playback.

**BACK:** Press and release to skip backwards through the tracks on the CD.

**PROG:** Use this button to select the order you want the tracks on the inserted CD to be played in.

**PLAY / PAUSE:** Press and release to play the selected track. Press and release again to pause the CD.

**NEXT:** Press and release to skip forwards through the tracks on the CD.

**REP:** Use this button to repeat the track you are listening to, all the tracks on the CD or no repeat.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

## Using the REPEAT function

You can use the repeat function to repeat a single track or the whole CD.

1. Press the REP button once and release to repeat the track you are listening to.
2. Press and release the REP button again to repeat the whole CD.
3. Press and release the REP button again to turn the repeat function off. The repeat screen will not be shown when this function is selected.

## Using the PROGRAM function

You can select the order you want 20 tracks from your CD to be played in using the PROG button.

1. Ensure the CD has stopped by pressing the STOP button.
2. Press the PROG button once,  will be shown in the LCD display.
3. Use the BACK or NEXT buttons to select the track you want to be played first.
4. Press the PROG button again and  will be shown in the LCD display.
5. Use the BACK or NEXT buttons to select the second track you want to be played.
6. Repeat steps 4 and 5 until you have stored all of the tracks you want to listen to. **Note:** Press the PROG button again to confirm selection.
7. Press the PLAY button to listen to the programmed tracks
8. To close the PROG function press the STOP button and the CD player will return to normal playback. After the all of the songs in the program have played the program will be cancelled

**Note:** You can also use the repeat function when using the program function.


Press the REP button once to repeat the track playing or twice to repeat all songs in the program. Press the REP button three time to cancel.

## Using AUX IN with the CD Boombox

You can fit AUX IN with a 3.5mm stereo jack connection to your CD Boombox.

Plug the 3.5mm jack on the AUX IN into the socket on the side of the CD Boombox.


Turn the radio or CD player on, ensuring the volume is turned down to minimum setting. Turn the volume up slowly to prevent damaging your hearing.

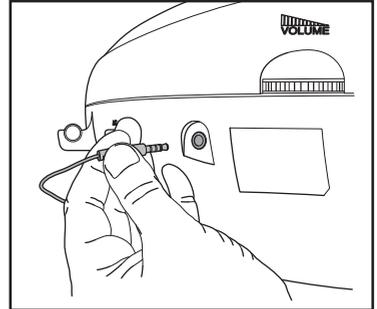

**Important:** Avoid extended play at very high volumes as this may impair your hearing. If you experience ringing in your ears, reduce the volume or shut off the unit. Keep the volume to a reasonable level as this can block outside sound.


## Using the carrying handle

Your CD Boombox has a built in carrying handle that can be lifted up from the back of the CD Boombox so you can carry it around. The handle can then be folded back down back into the top of the CD Boombox when in use.

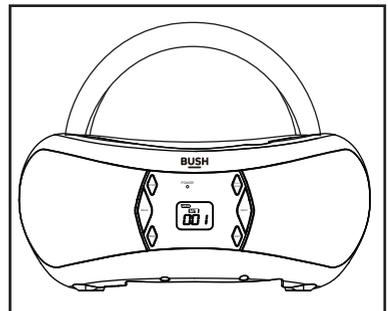

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Other information 4

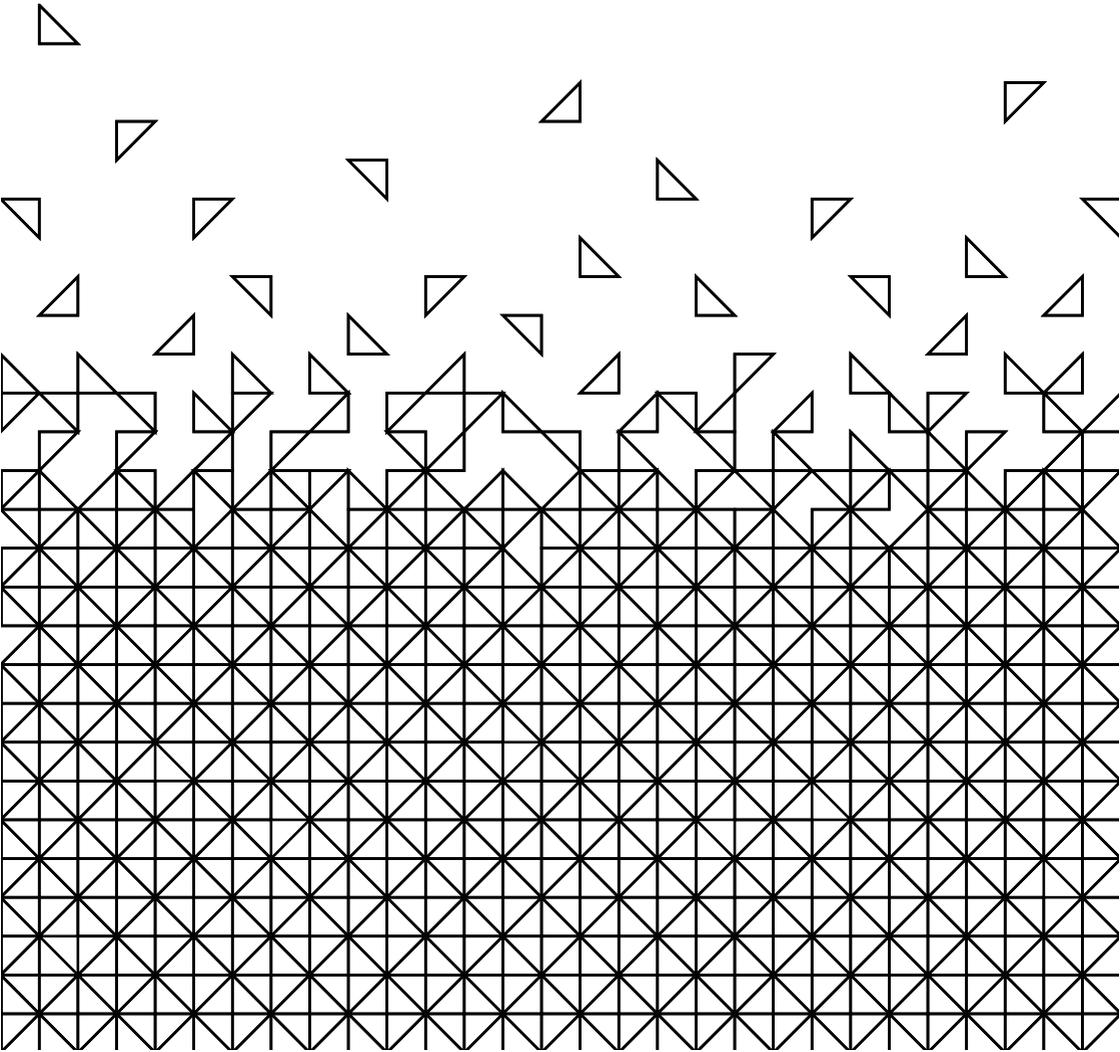

# Technical specification


<b>Input</b>	230V~ 50Hz
<b>Output</b>	2 x 1W RMS
<b>Frequency range</b>	<b>FM:</b> 88 - 108MHz <b>AM:</b> 520 - 1620KHz
<b>Power</b>	13W
<b>Operating conditions</b>	0°C to 35°C
<b>Speakers</b>	4 ohms 3watts
<b>Battery specification</b>	R14SG size C 1.5V x 8(12V $\equiv$ )
<b>AUX IN</b>	3.5mm stereo Aux in jack
<b>Support CD format</b>	MP3/CD
<b>Support CD type</b>	CD/CD-R/CD-RW



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Product support 5

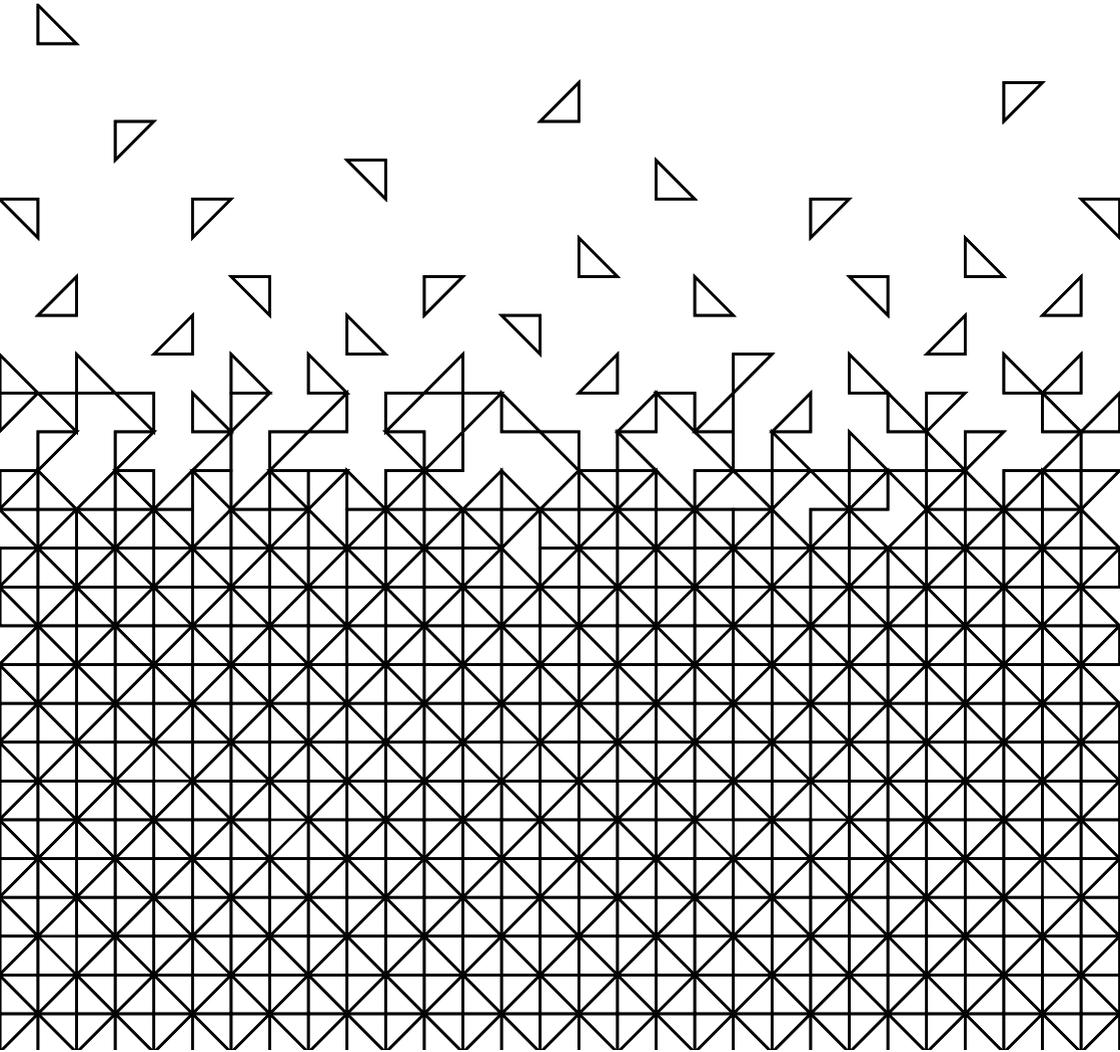

# Product support

Help is always at hand

## Troubleshooting

### CD does not play

- Check that you are in CD mode. If you are not already in CD mode, slide the switch on the back of the Boombox to CD/Line in.
- If you have an audio cable plugged into the Line in socket on the Boombox, you must unplug this before you can use the CD player. After unplugging the audio cable, please wait for approximately 15 seconds for the Boombox to return to CD mode.
- Take out the CD and check that it is not marked or scratched. Damaged CDs cannot be played in the Boombox or may skip or not rotate correctly in the CD compartment.
- Please check that you are using an original audio CD and not a copy. Often copied CDs will not play.

### The function buttons do not respond.

- Check that mains power wall socket is switched on.
- Slide the switch on the back of the Boombox to the mode you would like to use. The red power LED to the left of the display will switch on.
- Check that you are trying to use the function buttons for the mode that you are in.
- If you are using batteries, they may be exhausted and need to be replaced.
- If you are using mains power, unplug the mains power. Leave the Boombox for 3 minutes and then reconnect the power.

### Radio reception is poor.

- Check that you have extended the wire radio aerial in a vertical position.
- Move the tuning wheel slowly to tune to each radio station.
- Check there are no other electrical appliances within 1 metre of your Boombox, which may be causing interference.
- Try moving your Boombox to another location.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Product support

Help is always at hand

## Disposal

The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which should otherwise be caused by inappropriate waste handling of this product.. For more detailed information about recycling this products ,please contact your local council office your household waste disposal service or the shop where the product was purchased.



This product is intended for use within the UK. This equipment complies with the essential requirements for the Radio Equipment Directive 2014/53/EU

## Declaration of Conformance

Hereby, Argos Ltd, declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU

The complete declaration of conformity can be obtained by contacting <http://www.argos-support.co.uk>.



# Product support

Help is always at hand

## Help and assistance

If you require any technical guidance or find that your Bluetooth CD Boombox is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at [www.argos-support.co.uk](http://www.argos-support.co.uk)

If you still require further assistance, call one of our experts on **0345 604 0105** . To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

Serial number

Date of purchase

This will be shown on your receipt

Local call rates applies\*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

\*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on **0345 604 0105**.



# Product support

Help is always at hand

# BUSH

## Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

[www.bushregistration.co.uk](http://www.bushregistration.co.uk)

FREEPHONE\*

**0800 597 8548**

Lines are open 8am - 8pm, 365 days a year. \*Calls may be recorded and monitored.

## Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

### The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

## Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.


For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection **Officer, Domestic & General, Leicester House** 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on **0345 604 0105**.

# BUSH

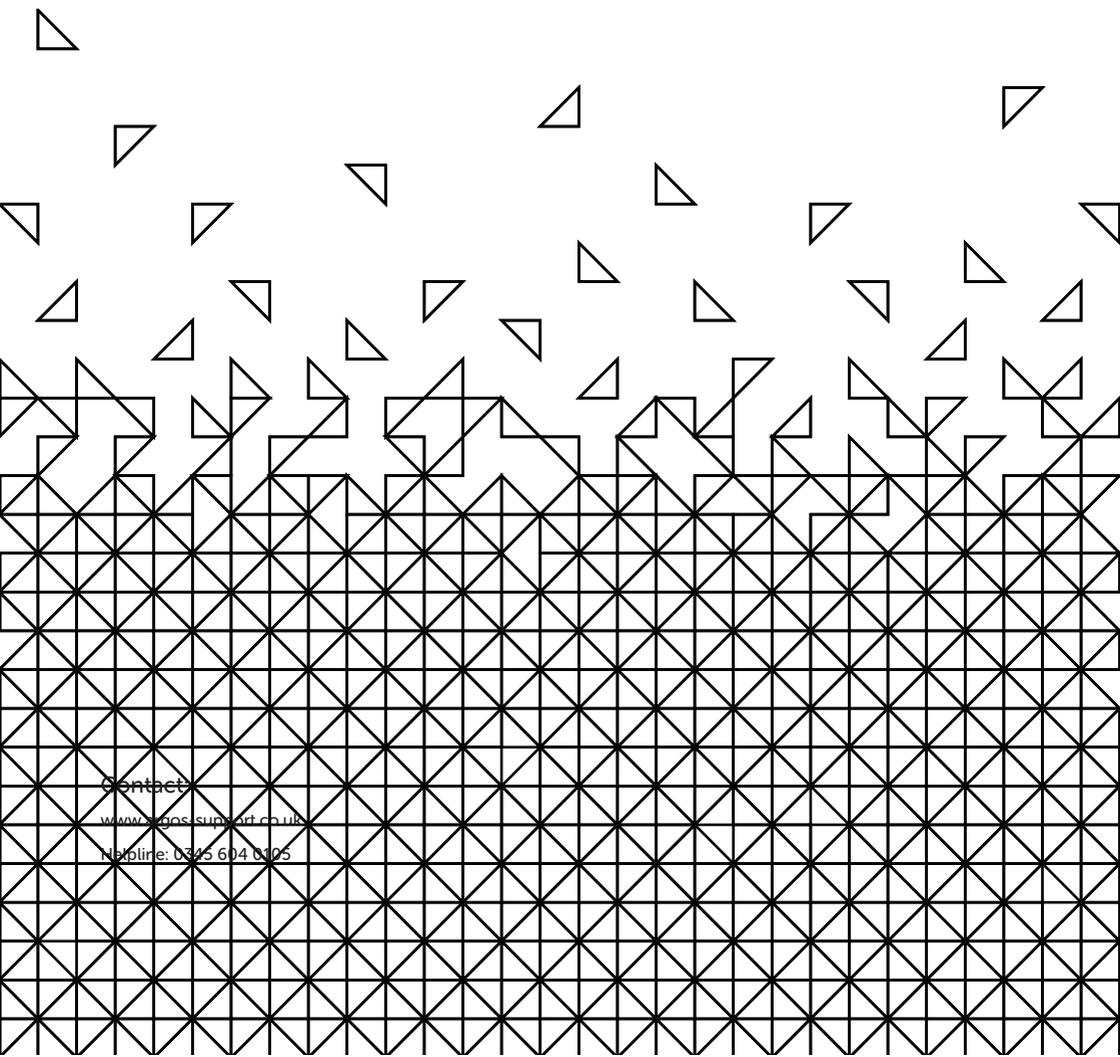

## Contact

[www.kagos-support.co.uk](http://www.kagos-support.co.uk)

Hotline: 0345 604 8025